

Modbus / EtherNet/IP Adapter GT100-EI-RS

User Manual

V 1.4

Rev D



SST Automation

Email: support@sstautomation.com

www.sstautomation.com



Important Information

Warning

The data and examples in this manual cannot be copied without authorization. SST Automation reserves the right to upgrade the product without notifying users.

The product has many applications. The users must make sure that all operations and results are in accordance with the safety of relevant fields, and the safety includes laws, rules, codes and standards.

Copyright

Copyright © 2022 by SST Automation. All rights reserved.

Trademark

 is the registered trade mark of SST Automation.

Technical Support Contact Information

www.sstautomation.com

E-mail: support@sstautomation.com

Catalog

1 Product Overview	1
1.1 Product Function	1
1.2 Product Features	1
1.3 Technical Specifications	1
1.4 Revision History	2
2 Hardware Description	3
2.1 Product Appearance	3
2.2 Indicators	4
2.3 Button	4
2.4 Interface	4
2.4.1 Power Interface	4
2.4.2 Ethernet Interface	5
2.4.3 RS485/RS422 Interface	5
2.4.4 RS232 Interface	6
3 Installation	7
3.1 Machine Dimension	7
3.2 Installation Method	7
4 Quick Start Guide	8
5 Software Instructions	9
5.1 Software Interface Description	9
5.2 Device View	10
5.2.1 Ethernet Configuration View	10
5.2.2 Subnet Configuration View-Modbus Master	12
5.2.3 Subnet Configuration View-User Config	16
5.3 Tools	17
5.3.1 Ethernet Configuration	17
5.3.2 Upload	18
5.3.3 Download	20
5.3.4 Calculate Auto Mapping	22
5.3.5 Mapping Address Conflict Detection	22
5.3.6 Export Excel	24
6 Working Principle	25
6.1 Modbus Master	25
6.2 User Config	26
6.3 EtherNet/IP Connection Parameters	27
6.4 How to Read/Write I/O Data	28
6.4.1 Read and Write Data using I/O mode(Recommended)	28
6.4.2 Read and Write Data using MSG	33



1 Product Overview

1.1 Product Function

GT100-EI-RS is an adapter which can realize the mutual conversion between Modbus protocol and EtherNet/IP protocol. It can connect Modbus (other serial protocol) devices to EtherNet/IP network. Modbus side supports RS485/RS422, and also supports RS232, it only uses one interface during data communication.

1.2 Product Features

- One RS485/RS422 or RS232 interface with independent 1KV photo electric isolation.
- Ethernet 10/100M self-adaptive.
- IP address conflict detection.
- Modbus network communication debug function.
- Provide easy-to-use configuration software SST-MI-CFG.

1.3 Technical Specifications

[1] EtherNet/IP network is independent with Modbus network.

[2] Ethernet 10/100M self-adaptive.

[3] IP address conflict detection.

[4] Support ODVA standard EtherNet/IP communication protocol.

[5] Serial port parameters:

- ◆ RS485/RS422 or RS232 interface, half-duplex.
- ◆ Baud rate: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200 bps can be selected.
- ◆ Parity check mode: None, Odd and Even can be selected.
- ◆ Stop bits: 1,2 optional.

[6] Modbus master:

- ◆ Function code: 01H, 02H, 03H, 04H, 05H, 06H, 0FH and 10H.
- ◆ Each master can configure up to 48 Modbus commands.

- ◆ 03H and 04H support "**Word / Byte mapping**" and it is easy to solve the format conversion problem of big endian and little endian between two network data. The gateway can connect 8 Modbus slave devices for RS485 connection.

[7] User Config: supports character timeout, character number and delimiter control mode, and has auto sending function.

[8] Serial port has independent 1KV photoelectric isolation.

[9] Max input and output bytes of EtherNet/IP:

- ◆ Max input bytes: 492 bytes (256 bytes under universal mode).
- ◆ Max output bytes: 492 bytes (256 bytes under universal mode).

[10] Power supply: 24VDC (11~30VDC), 70mA (24VDC).

[11] Working temperature: -40°F~140°F(-40°C~60°C), Humidity: 5% ~ 95% (non-condensing).

[12] Dimensions (W*H*D): 1.0 in*4.0 in *3.6 in (25mm*100mm*90mm).

[13] Installation: 1.4 in (35mm) RAIL.

[14] Protection level: IP20.

1.4 Revision History

Revision	Date	Chapter	Description
V1.2	7/14/2015	ALL	New release
V1.4	12/26/2016	ALL	Revision for GT100-EI-RS V1.4
V1.4, Rev A	1/17/2017	ALL	Change the default Assign IP Mode to DHCP
V1.4, Rev B	3/18/2018	ALL	Change the default IP address to 192.168.1.XXX
V1.4, Rev C	6/17/2021	Chapter 2.3, 3.1	Revision and picture updated. Change the default IP address to 192.168.0.XXX
V1.4, Rev D	1/12/2022	ALL	Update the format.

2 Hardware Description

2.1 Product Appearance



Note: This picture is for reference only. The product appearance is subject to the actual product.

2.2 Indicators

Indicators	Status	Descriptions
ENS (IP indicators)	Red off	IP address launch is normal
	Red blinking	DHCP
SNS (EtherNet/IP network status indicators)	Green on	Ethernet/IP connection is established, communication is normal
	Green blinking	EtherNet/IP connection is not established
TX, RX (Serial data indicators)	TX, red blinking	Serial port is sending data
	RX, green blinking	Serial port is receiving data

2.3 Button

The button is located at the top of the adapter.

Action	Descriptions
Press button down for at least 3 seconds, and release the button after all indicators are off.	Reset to default settings - 192.168.0.11


Note: The reset action will clear the configuration, please download the configuration firstly before using.

2.4 Interface

2.4.1 Power Interface

GT100-EI-RS has one power interface. It is recommended to use 24VDC power.

Pin	Function
1	Power GND
2	NC, not connected
3	24V+, DC Positive 24V

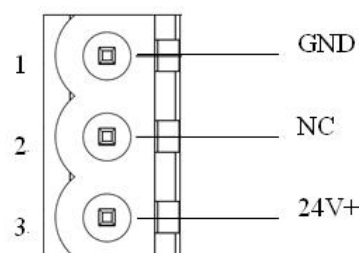



2.4.2 Ethernet Interface

Ethernet interface uses RJ-45 connector. its pin (standard Ethernet signal) is defined as below:


Pin	Signal Descriptions
S1	TXD+, Transmit Data+
S2	TXD-, Transmit Data-
S3	RXD+, Receive Data+
S4	Bi-directional Data+
S5	Bi-directional Data-
S6	RXD-, Receive Data-
S7	Bi-directional Data+
S8	Bi-directional Data-



2.4.3 RS485/RS422 Interface

Serial interface uses 5-pin terminal and users can wire it according to the wiring instructions on the panel.

Pin	Function
1	R-, RS422 Receive Negative
2	R+, RS422 Receive Positive
3	GND
4	D-, RS485/RS422 Transmit Negative
5	D+, RS485/RS422 Transmit Positive

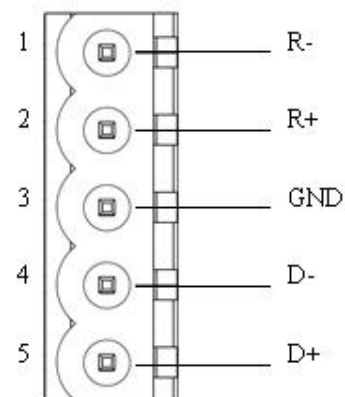

When RS485 is in the communication of point to multi-point, to prevent the reflection and obstruction of signal, users need to use two terminal resistances in furthest ports of line, and the parameters are 120Ω 1/2W.


Note: There is no terminal resistor inside RS485/RS422 interface of GT100-EI-RS.



2.4.4 RS232 Interface

RS232 interface pin description is shown as follows:

Pin	Function
1	TX, Connect user device RS232's RX
2	RX, Connect user device RS232's TX
3	GND, Connect user device RS232's GND

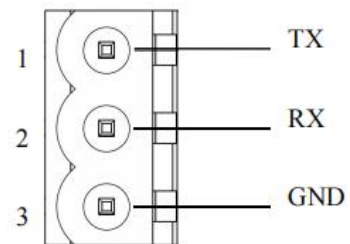


3 Installation

3.1 Machine Dimension


Size (width * height * depth):

1.0 in * 4.0 in * 3.6 in (25 mm * 100 mm * 90 mm)

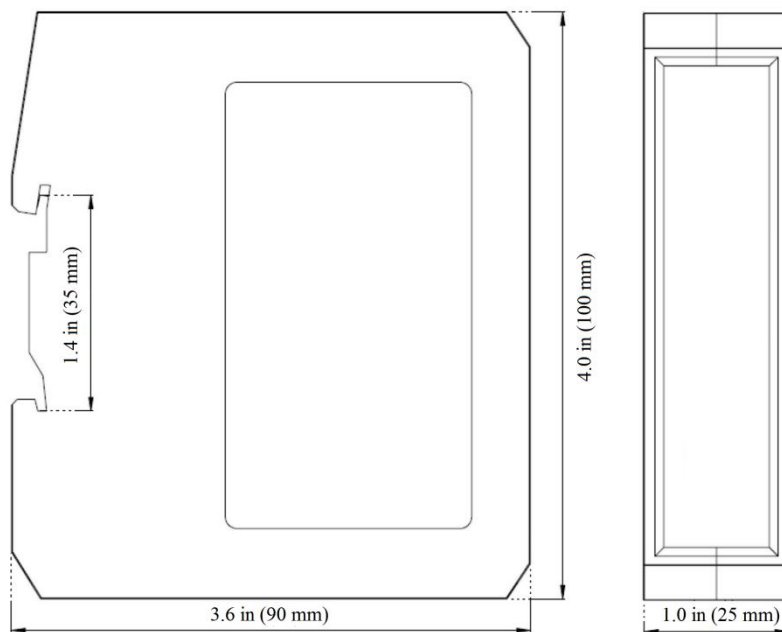

3.2 Installation Method

Using 1.4 in (35mm) DIN RAIL

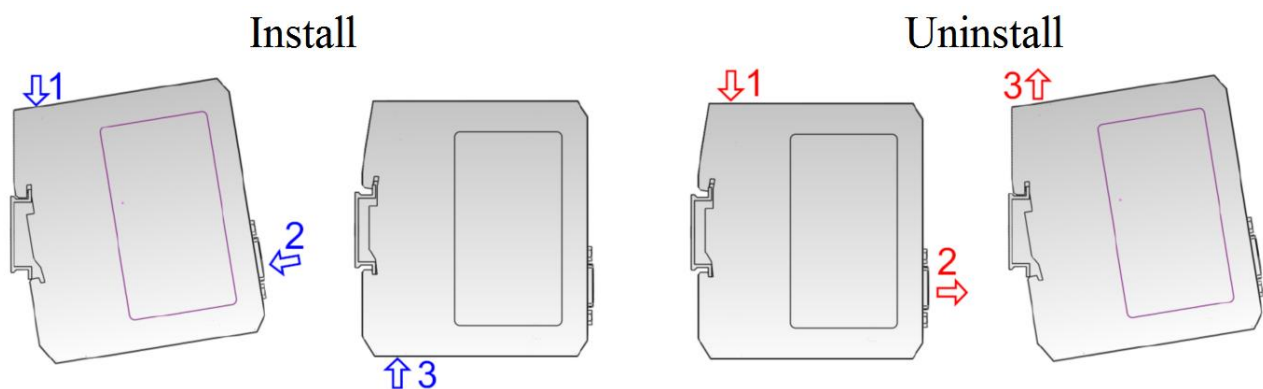



4 Quick Start Guide

Basic steps when configuring G100-EI-RS :

1. Wiring: See also [Chaper 2.4 Interface](#).
 - (1) Connect the network port of the gateway to the PC with a network cable for downloading the configuration.
 - (2) Connect the serial port of the gateway to the serial device for communication.
 - (3) Connect the gateway power supply and power on.
2. Download SST-MI-CFG software from www.sstcomm.com/Download1/ and install it.
3. Download the EDS file for GT100-EI-RS from www.sstcomm.com/Download1/.
4. Build your configuration using SST-MI-CFG and download it to the gateway. For more details, see [Chapter 5](#).

If the gateway cannot be searched, please note:


- The network factory setting of GT100-EI-RS is 192.168.0.XXX. Please check whether the computer and gateway are in the same network segment.
 - Please test the network connection first. Please refer to the note “[How to Use the Ping Command](#)” located on our Support page on the sstcomm.com website.
 - If you press and hold the button for 3 seconds, release the button after all indicators are off, the gateway will restore the default configuration, and the IP address will be fixed to 192.168.0.11.
5. Install the EDS file in the configuration software of the EtherNet/IP Master station. Configure the EtherNet IP network as required. Make sure that the configuration matches the configuration present in the GT100-EI-RS. Refer to the instructions in [Chapter 6.3](#) and [6.4](#).

5 Software Instructions


5.1 Software Interface Description

SST-MI-CFG is the software based on Windows platform. It is used to configure GT100-EI-RS through network Interface. It can set the relevant parameters and commands of Modbus and Ethernet.

Double click the software icon on the desktop after installation to enter the configuration interface:

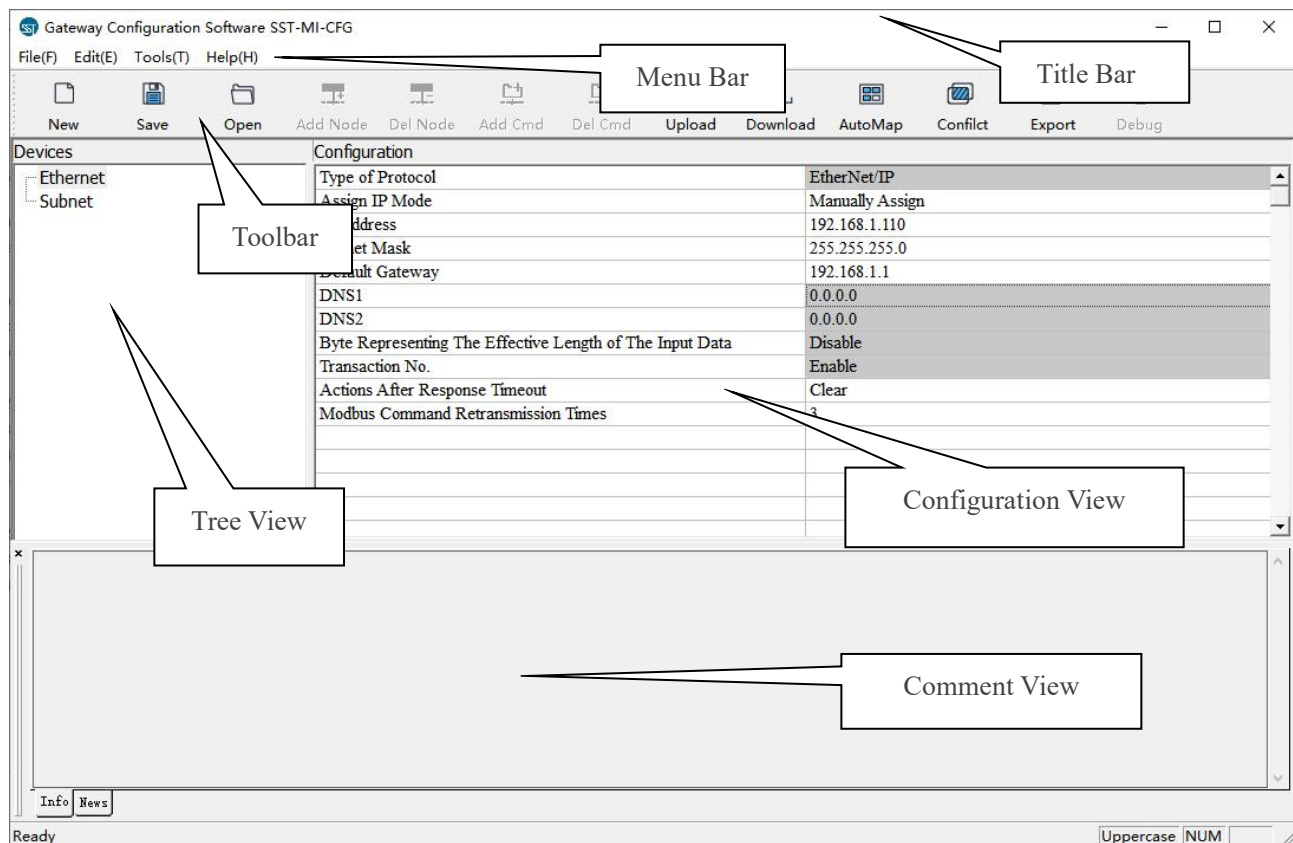

Toolbar interface shown as follow:

 

GT100-EI-RS Modbus/EtherNet/IP Adapter

User Manual


 Save	Save: Save current configuration.
 Open	Open: Open a configuration project.
 Add Node	Add Node: Add a Modbus slave node.
 Del Node	Delete Node: Delete a Modbus slave node.
 Add Cmd	Add Command: Add a Modbus command.
 Del Cmd	Delete Command: Delete a Modbus command.
 Upload	Upload: Read the configuration information from the module and shown in the software.
 Download	Download: Download the configuration file to the adapter.
 AutoMap	Calculate Mapping Address: Used to automatically calculate the mapped memory address without conflict by each command.
 Conflict	Mapping Address Conflict Detection: To check whether there are some conflicts with configured commands in the adapter memory data buffer.
 Export	Export EXCEL: Export current configuration to the local hard disk, saved as .xls file.
 Debug	Debug: Reserved.

5.2 Device View

5.2.1 Ethernet Configuration View

In the device view interface, click Ethernet. configuration view interface is as below:

GT100-EI-RS Modbus/EtherNet/IP Adapter User Manual

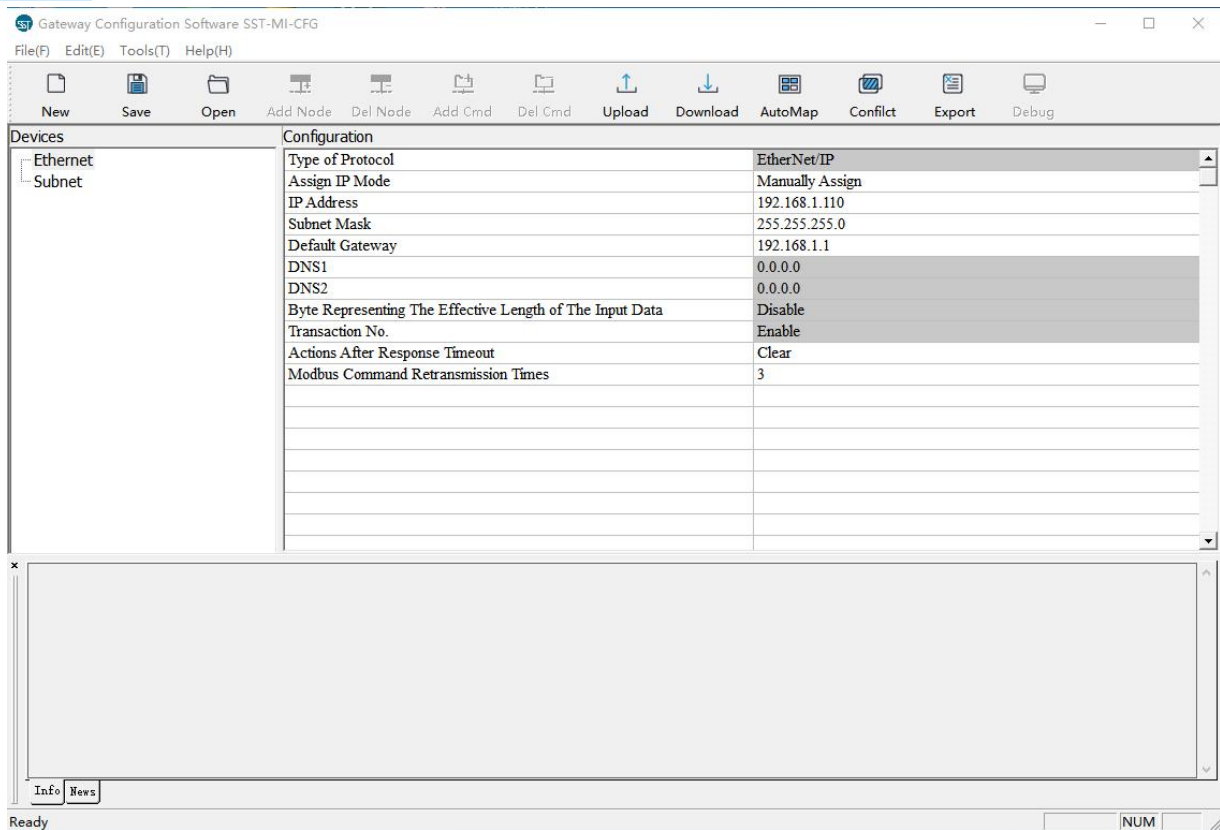

Assign IP Mode: Manual Assign, DHCP.

IP Address: Set the IP address of the device.

Default Gateway: Set the gateway address of the device.

Byte Representing The Effective Length of The Input Data: When the subnet type is selected as "User Config", the function of "Enter the valid data length" is enabled, the options:

Enable: The first byte in Ethernet input data indicates the length of serial receiving data frame.

Disable: No bytes in Ethernet input data are used to indicate the data length.

Transaction No.: When the subnet protocol type is selected as User Config, the transaction number function is enabled, the options:

Enable: Use transaction number.

Disable: Do not use transaction number.

Actions After Response Timeout: When Modbus command response error times is equal to Modbus command retry, the gateway will clear EtherNet/IP input data.

Clear: Clear the input data of EtherNet/IP.

Hold: Hold the last received right data of EtherNet/IP.

Modbus command Retransmission Times: When there is Modbus command response error, set the times to resend.


When you select "User Config" of Type of Protocol under Subnet 1, Response Timeout Clear/Hold and Modbus command retry are disabled.

When you select "Modbus Master", this two parameters are enabled.

5.2.2 Subnet Configuration View-Modbus Master

1. Modbus Master configuration view

The "Modbus Master" configuration interface of "Protocol Mode" is shown as below:

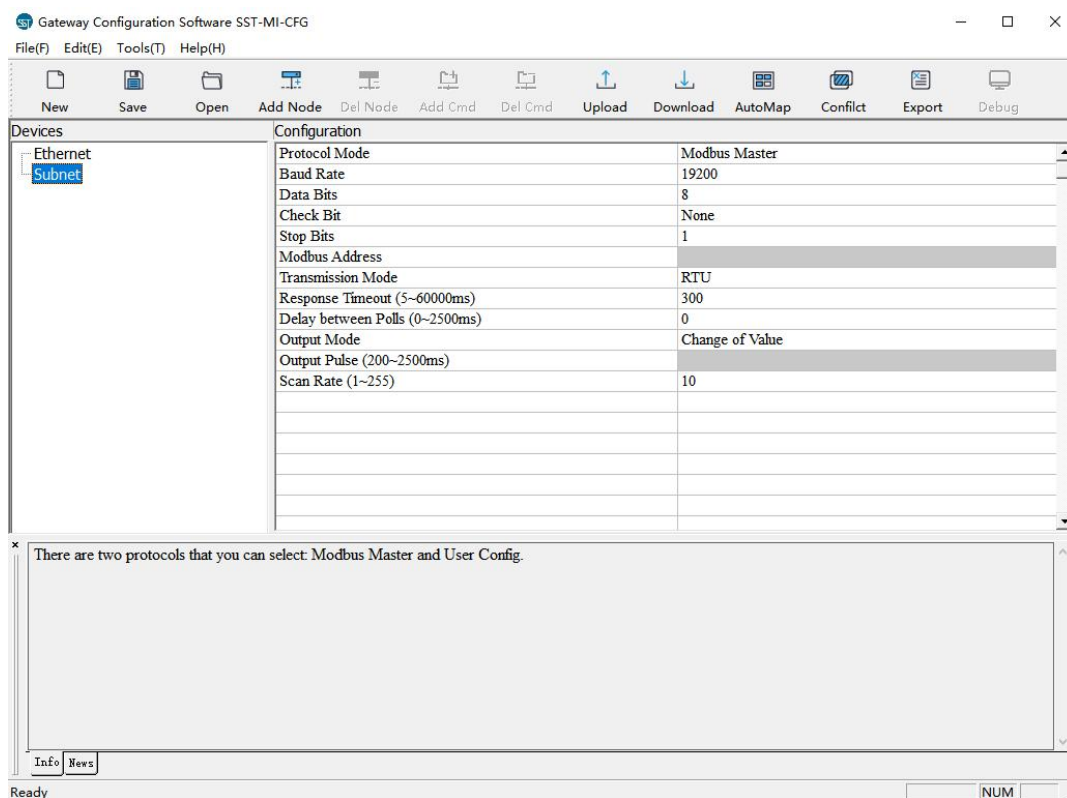

Baud Rate: There are 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200bps.

Data Bits: 7, 8.

Check Bit: None, Odd, Even.

Stop Bits: 1, 2.

Transmission Mode: RTU and ASCII.

Response Timeout: After the Modbus Master sends request, it waits the Modbus slave's response time. range: 5~60000ms.

Delay between Polls: Delay between a response has been received and sending next request, the range is 0~2500ms.

Output Mode: There are three types of output command: Cycle, Forbidden and Change of Value.

Cycle: same as Modbus read command output way, start scan output according to scan rate.


Forbidden: disable output of Modbus write command.

Change of Value: when the output data change, the write command will be sent and stop to output when receiving the right response.

Scan Rate: Scan Rate is the ratio of fast scan cycle to slow scan cycle. If this parameter value is set to 10 then every fast scan command will be sent 10 times and those slow scan commands will be sent once.

2. Node Configuration

Under the "Modbus Master" mode, left click on a node and then the configuration interface is shown as below:

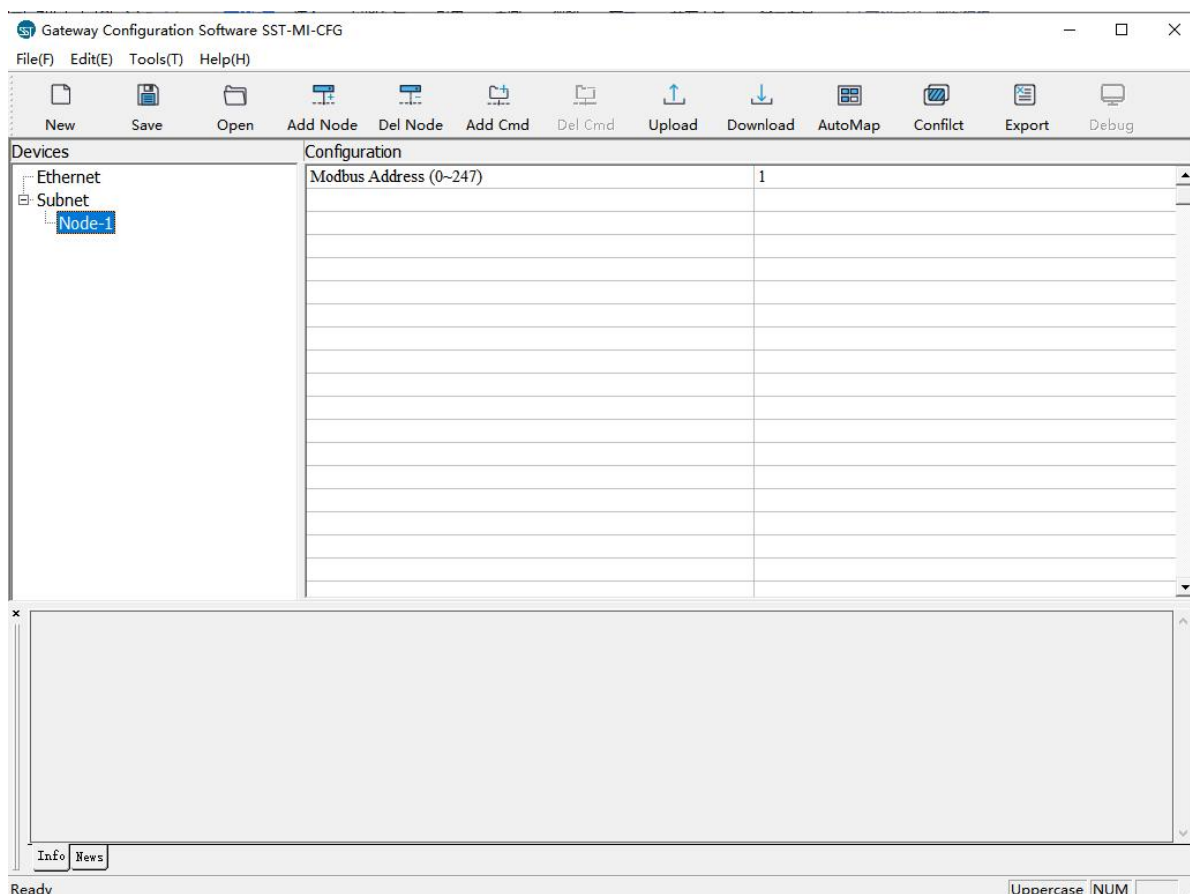


- Parameter Description:

(1) When the subnet protocols Mode is selected as "Modbus Master", the node is the Modbus slave station address, ranging from 0 ~ 247.

(2) When using RS485 serial port, up to 8 nodes can be configured.

- Instructions: For device view, the software supports three kinds of operation modes: edit menu, edit toolbar, and right-click edit menu.

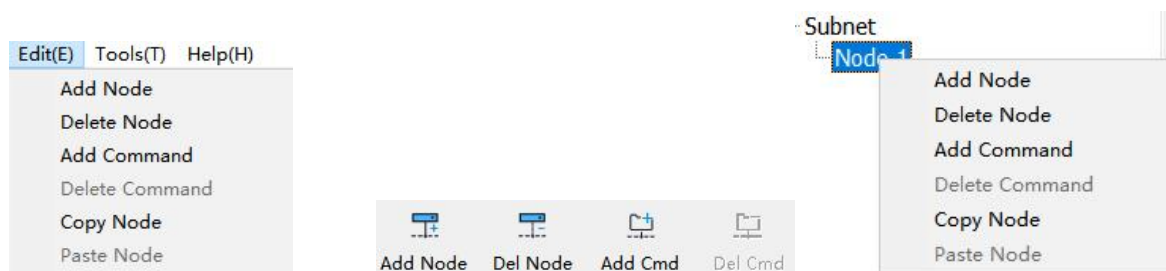

(1) Add node: Left click on subnet or existing nodes, and then perform the operation of adding a new node. Then there is a new node named "Node-x" under subnet.

(2) Delete node: Left click on the node to be deleted, and then perform the operation of deleting node. The node and all commands will be deleted.

(3) Copy node: Left click on the existing node, choose the node and execute the operation of copying nodes (include all commands under the node).

(4) Paste node: Left click and choose any existing node, execute operation of pasting node. Then under the subnet tree you can see a new node (include all commands under the node). Parameters of new node is default setting, it needs to be reset.

3. Command Configuration

- Parameter Description: Commands No. supported: 01, 02, 03, 04, 05, 06, 15, 16

- Instructions: The Command Configuration view supports three types of operation: Edit Menu, Edit Toolbar and Right click edit Menu.

(1) Add commands: Left click on the node, and then perform the operation of adding command to add a command for the node.


(2) Delete commands: Left-click on the command and perform the operation of deleting command.

Under the "Modbus Master" mode, left click on a command and then the configuration interface is shown as below:

GT100-EI-RS

Modbus/EtherNet/IP Adapter

User Manual

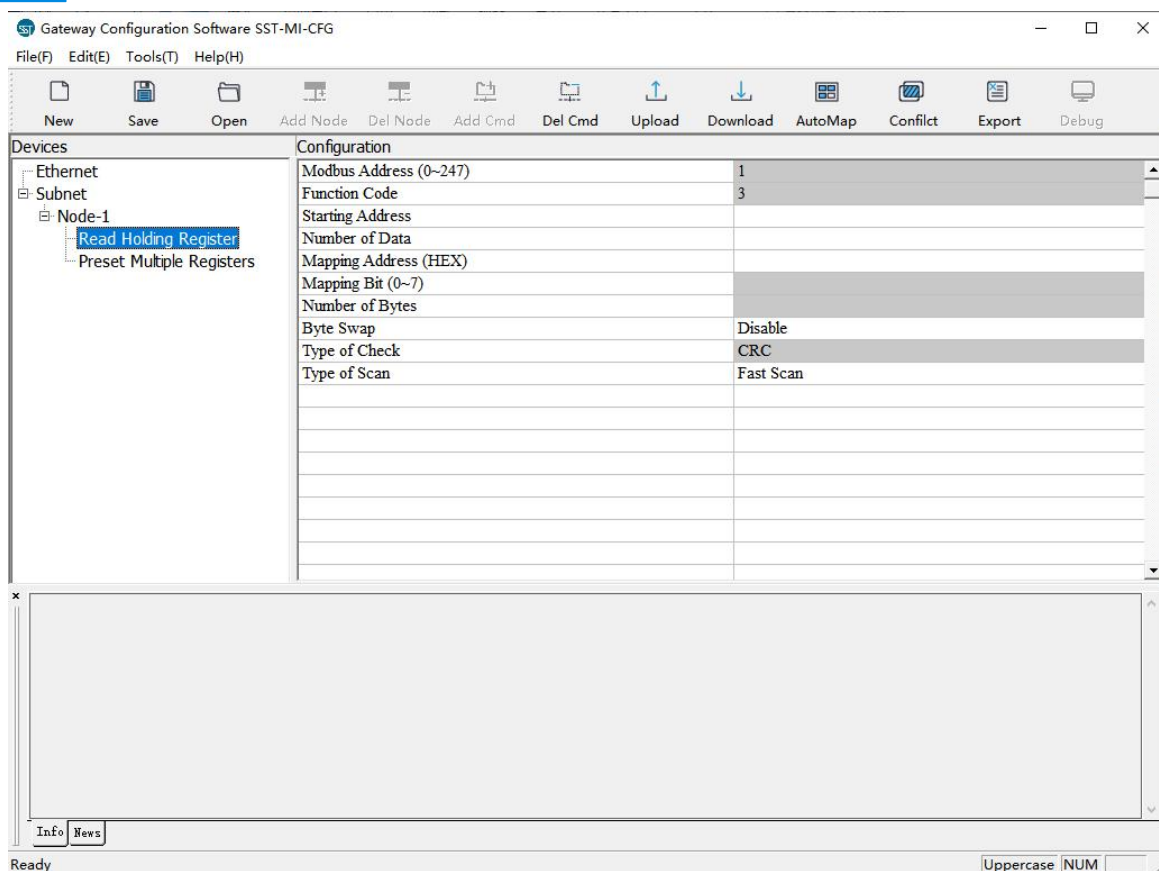

Starting Address: the starting address of the register/switching value/coil in Modbus slave device. The range of the parameter value is 0 to 65535.

Note: This item of SST-MI-CFG indicates protocol address. When users input PLC address, it will pop up the dialog box below. After clicking OK, the PLC address users input will be converted into the protocol address.

Here is the example of PLC address and corresponding protocol address.

Command	PLC address examples	Corresponding protocol address
Coil Status	00001~00010	00000~00009
Input Status	10001~10010	00000~00009
Holding Register	40001~40010	00000~00009
Input Register	30001~30010	00000~00009

For example: When Modbus command is configured as 03H (read holding register), when users input 40001 in this item (Modbus register starting address), it will pop up the dialog box after confirming. When clicking OK, PLC address 40001 will be converted into 0.

Number of Data: Register/switching value/coil numbers.

Mapping Address (HEX): Data starting address in module memory buffer.

Address range that data is mapped in the module memory.

Read command: 0x0000~0x01EB.

Write command: 0x4000~0x41EB.

Users can also use this area after write command is about local data exchange: 0x0000~0x01EB.

Mapping Bit (0~7): For the bit operation command, means the position where the start bit is in the byte, range 0~7.

Number of Bytes: The data bytes of number of data.


Byte Swap: No swap, swap. Modbus byte order is the most significant byte (MSB) first, EtherNet/IP byte order is the least significant byte (LSB) first. Users may need to exchange byte order to get the right value.

Type of Scan: There are two ways, fast and slow scan. Every Modbus command can be set to fast scan or slow scan. The adapter will send Modbus command according to the "Scan Rate". Scan Rate is ratio of fast scan to slow scan.

5.2.3 Subnet Configuration View-User Config

When you switch the Protocol Mode from “Modbus Master” to “User Config”, you should manually power off and power on the gateway to make the configuration take effect after downloading the configuration.

The “User Config” configuration interface of “Protocols Mode” is shown as below:

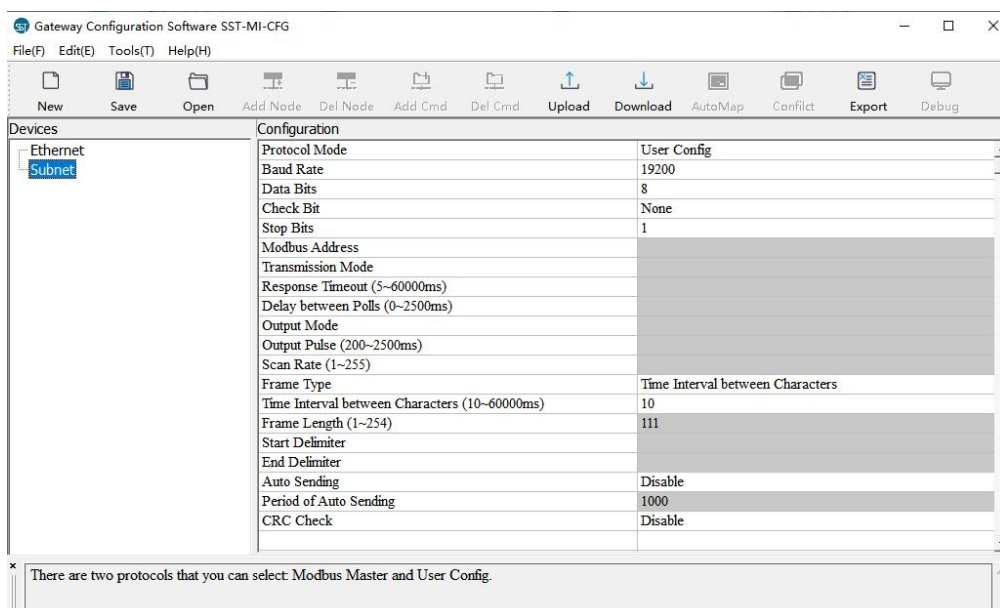

Baud Rate: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200 bps.

Data Bits: 7, 8.

Check Bit: None, Odd, Even.

Stop Bits: 1, 2.

Frame Type: In "User Config" mode, there are three methods to decide whether a frame is terminated or not:

Time Interval between Characters, Frame length and Delimiter.

Time Interval Between Characters: To determine the end of one frame serial data by judging the time interval between characters.

Frame Length: To determine the end of one frame serial data by judging the length of frame.

Delimiter: To judge by setting start delimiter and end delimiter of one frame data.

Auto Sending: Enable, Disable.

Period of Auto Sending: User input, the default value is 1000, the range is 10~60000ms. Valid when enable Auto Sending.

CRC Check: Valid when frame type is Time Interval between Characters and frame length. Enable and Disable

5.3 Tools


The "Tools" tab on the menu bar contains the following functions:

- Ethernet Connection
- Upload
- Download
- Calculate Mapping Address
- Mapping Address Conflict Detection
- Export EXCEL


5.3.1 Ethernet Configuration

“Ethernet configuration” has two options.

- (1) The default option is to check “use the search function”. The users can search all GT200-MT-EI gateways on the network.

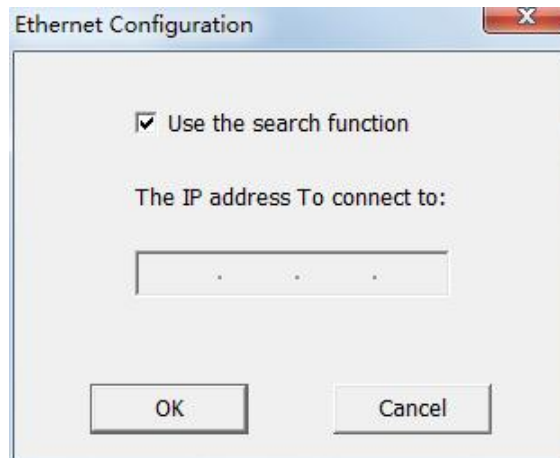

(2) When “use the search function” is not checked, users can search a gateway with the specified IP address.
Fill in the IP address of the gateway you want to search, and click “OK” button to confirm search.

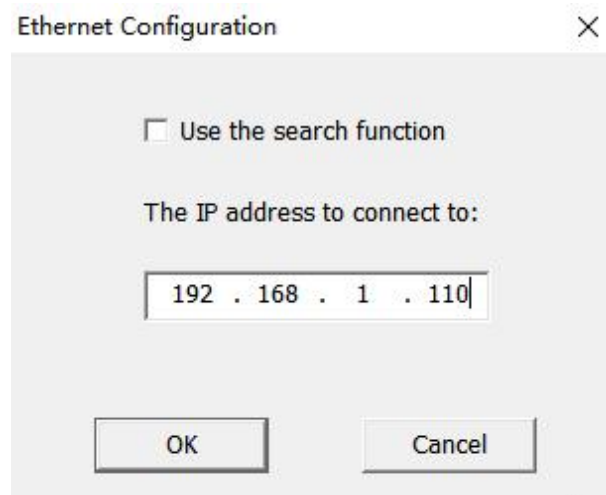


5.3.2 Upload

Select "Upload", it will read configurations form the adapter, and the interface is shown as below:


GT100-EI-RS

Modbus/EtherNet/IP Adapter


User Manual

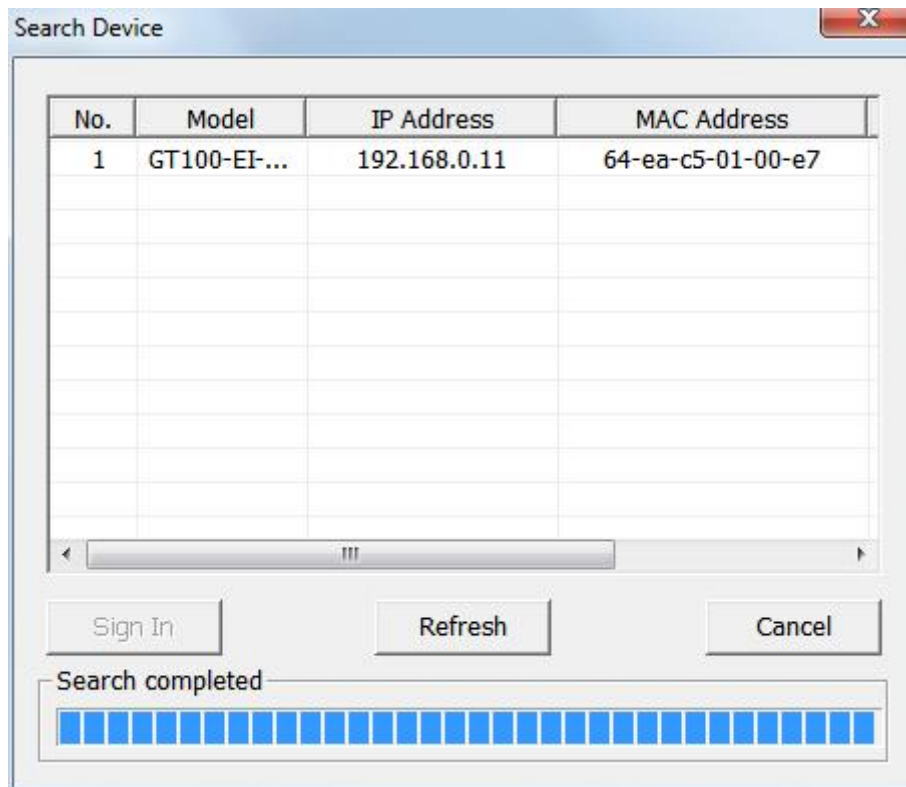

Select the device, click Sign In.

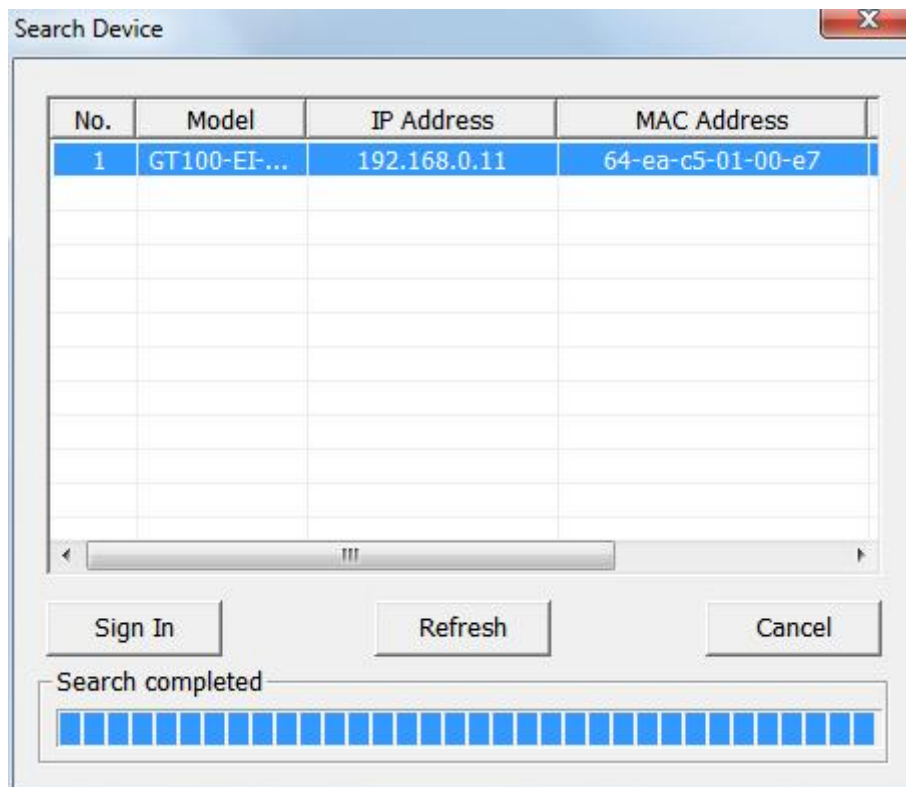

Click Upload.

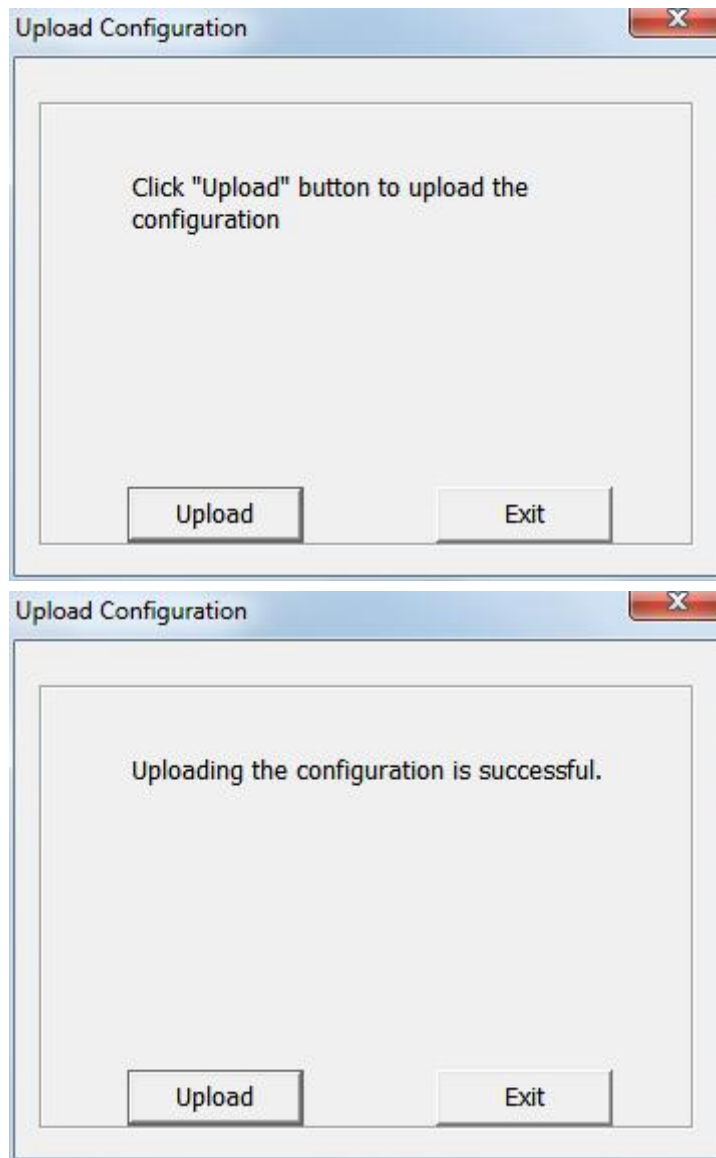

If the gateway cannot be searched:

- Please check whether the computer and gateway are in the same network segment. When using the gateway for the first time, the gateway is in the 192.168.0.X network segment.
- Please test the network connection first. Please refer to the note "[How to Use the Ping Command](#)" located on our Support page on the sstcomm.com website.

5.3.3 Download

Select "Download", it will download configurations to the adapter, and the interface is shown as below:

The screenshot shows a window titled "Search Device" with a close button in the top right corner. Inside the window is a table with four columns: "No.", "Model", "IP Address", and "MAC Address". The first row contains the following data: "1", "GT100-EI...", "192.168.0.11", and "64-ea-c5-01-00-e7". Below the table is a horizontal scrollbar. At the bottom of the window are three buttons: "Sign In", "Refresh", and "Cancel". Below these buttons is a status bar that says "Search completed" followed by a progress bar consisting of 20 blue rectangular segments.

No.	Model	IP Address	MAC Address
1	GT100-EI...	192.168.0.11	64-ea-c5-01-00-e7

Sign In Refresh Cancel

Search completed

Progress bar: 20 blue segments

Remark: Please confirm the configurations are correct before downloading configurations (you can use "Export EXCEL" function and it can help you check the configurations).

Select the device, click Sign In and download the configuration to the adapter.




Download Configuration

Click "Download" button to download the configuration.

Download Exit


After downloading, it will pop up the dialog box as below:

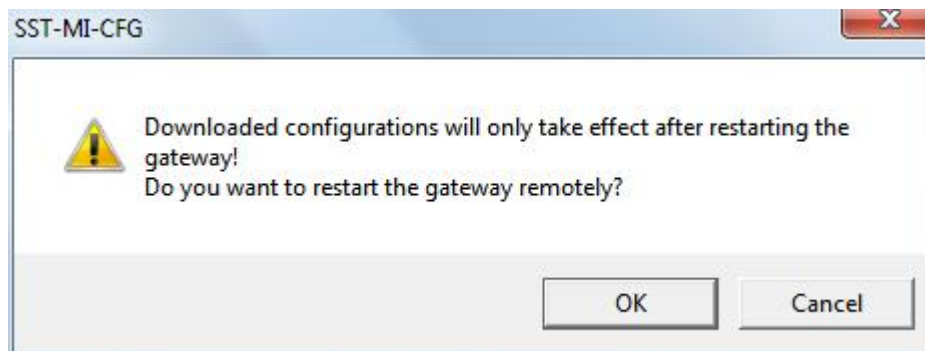

Click OK will restart the gateway remotely.

5.3.4 Calculate Auto Mapping

The mapping address of every command in the gateway must be calculated by fixed formula, users can use "Calculate Mapping Address" to calculate mapping address automatically.

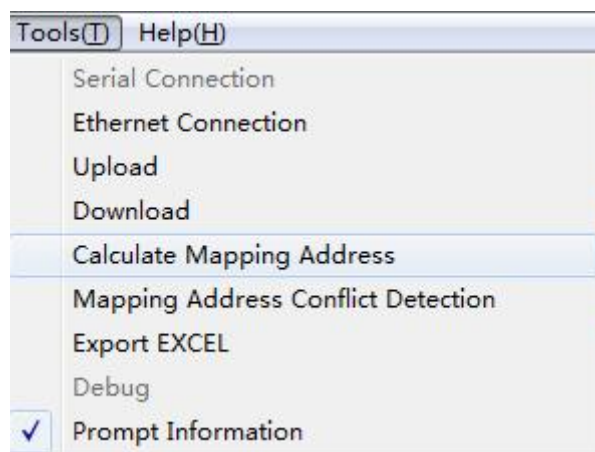


5.3.5 Mapping Address Conflict Detection

It is used to check whether there exists confliction in "memory mapping data". If users find confliction, it can be adjusted in time. The interface is shown below:

GT100-EI-RS

Modbus/EtherNet/IP Adapter

User Manual

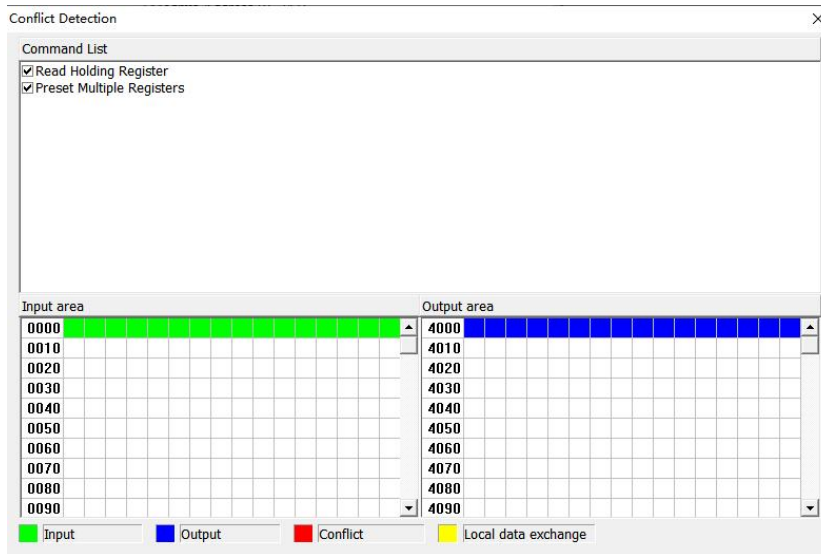

(1) Command List Operation

It shows configured command in the command list interface. Check box before each command is used to check the position of this command in memory mapping area. Click one command and check the box, it will show the position where relevant commands occupy in the memory mapping area. Click the command again and uncheck the box, the command will not be shown in the mapping area. This function will be used for confliction detect among commands in memory mapping area.



(2) Memory Mapping Area Operation

Memory mapping area divides into input area and output area.

Input mapping address range: 0x0000 ~ 0x3FFF.

Output mapping address range: 0x4000 ~ 0x7FFF.

Each grid represents one byte address.


Green: Read command is shown in input mapping area, it will be in green without conflict.

Blue: When address mapping area is located in output area, it will be in blue without conflict.

Red: In input area or output area, different command occupied on the same byte, this byte area will be in red.

For bit operation command, the above grid displaying meaning works the same.


Click input/output area grids, each bit of relevant byte in the grid will show whether each bit is occupied. As is shown below:

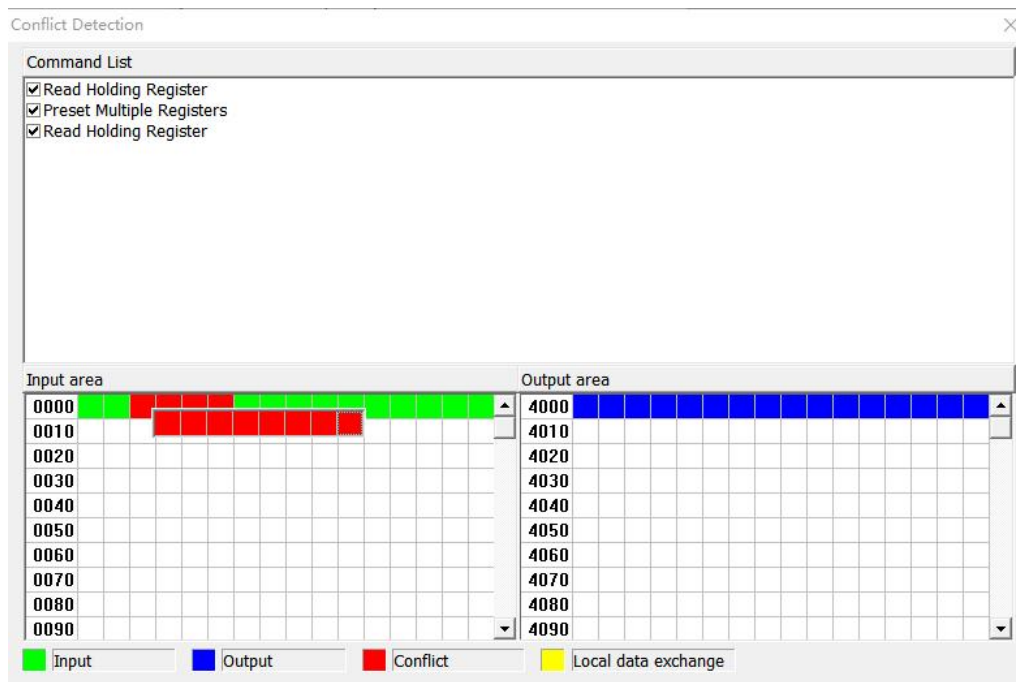

5.3.6 Export Excel

Users can use the function to check the adapter configurations.

Select "Export EXCEL", you can save the configuration with .xls as its extension.

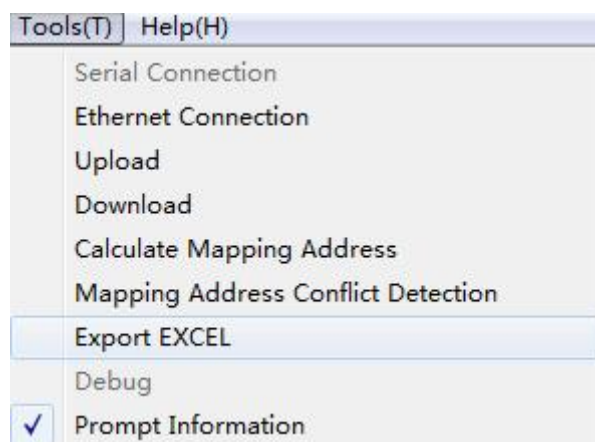


After clicking save, it will open the excel file automatically.

6 Working Principle

6.1 Modbus Master

Data exchange of Modbus and EtherNet/IP of GT100-EI-RS is set up through "mapping". There are two data buffer areas, one is EtherNet/IP network input buffer and the other is EtherNet/IP network output buffer. Network input and output buffer is all for EtherNet/IP scanner. Modbus read command will write the read data to the network input buffer for EtherNet/IP accessing. Modbus write register command gets data from network output buffer and export to the Modbus slave equipment through write command.

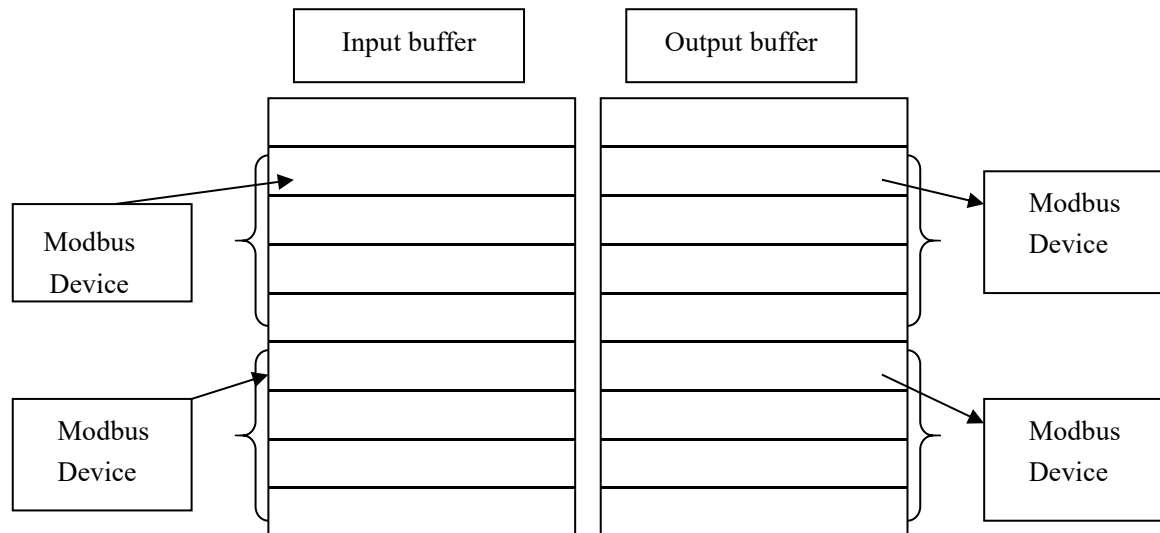


Users can configure at most 48 commands, each one Modbus command can read one group of continuous Modbus registers.

6.2 User Config

1 Data Exchange

This product provides data exchange between EtherNet/IP industrial Ethernet protocol and serial interface. The communication between EtherNet/IP and serial data is bidirectional. The output data of EtherNet/IP can be sent to serial fieldbus through the serial interface and the data received from serial interface is put into input data of EtherNet/IP. Data exchange is shown as follows:

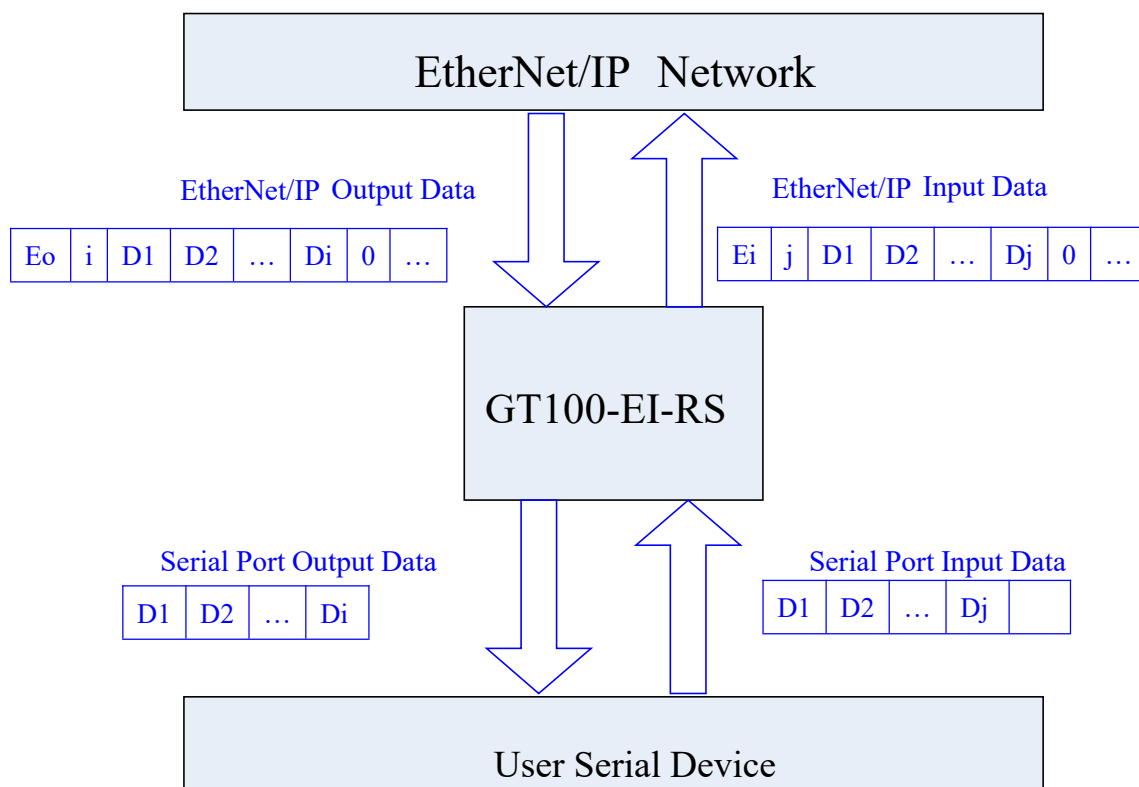

" E_o " is transaction number of PROFIBUS output data. " i " is serial data number included in output data being transmitted. " D_1 " to " D_i " are data being transmitted by serial. " E_i " is transaction number of PROFIBUS input data. " j " is serial data number included in input data receiving form serial. " D_1 " to " D_j " are data receiving form serial.

2 Universal Protocol

EtherNet/IP output data format:



[Transaction number]	[Output data length n]	[Output data 1]... [Output data n]	[0x00] ... [0x00]
	-- n --	-- m --	

Note:

The number of EtherNet/IP output byte should be greater than or equal to $n + 2$.

M 0x00 are filling data (also for any number). $n + m + 2$ should be equal to the number of EtherNet/IP output-byte.

Transaction number: When transmitting output data. the transaction number must add 1 to show a new frame data.

Example:

If users select the number of EtherNet input byte and output-byte is 8-byte input and 8-byte output, length of serial output-data is 3, data are 01 02 03. Current transaction number is 0.

The format of output-data is:

[01][03][01][02][03][00][00][00][00]

EtherNet input data format:

[Transaction number]	[Input data length n]	[Input data 1]... [Input data n]	[0x00] ... [0x00]
	-- n --	-- m --	

Note:

The number of EtherNet/IP input byte should be greater than or equal to $n + 2$.

M 0x00 are filling data (also for any number). $n + m + 2$ should be equal to the number of EtherNet/IP input-byte.

Transaction number: The transaction number adds 1 showing a new frame input data.

Example:

If users select the number of EtherNet/IP input-byte and output byte is 8-byte input and 8-byte output, length of serial input-data is 3, data are 04 05 06. Current transaction number is 0.

The format of input data is:


[01][03][04][05][06][00][00][00][00]

6.3 EtherNet/IP Connection Parameters

Connection parameters the adapter provides are as below:

- Input Instance: 102 (128 Bytes), 112 (256 Bytes), 122 (492 Bytes).
- Output Instance: 101 (128 Bytes), 111 (256 Bytes), 121 (492 Bytes).
- Configuration Instance: 103 (10 Bytes), 113 (10 Bytes), 123 (10 Bytes).

Take configuration parameters of RSLogix5000 as an example:

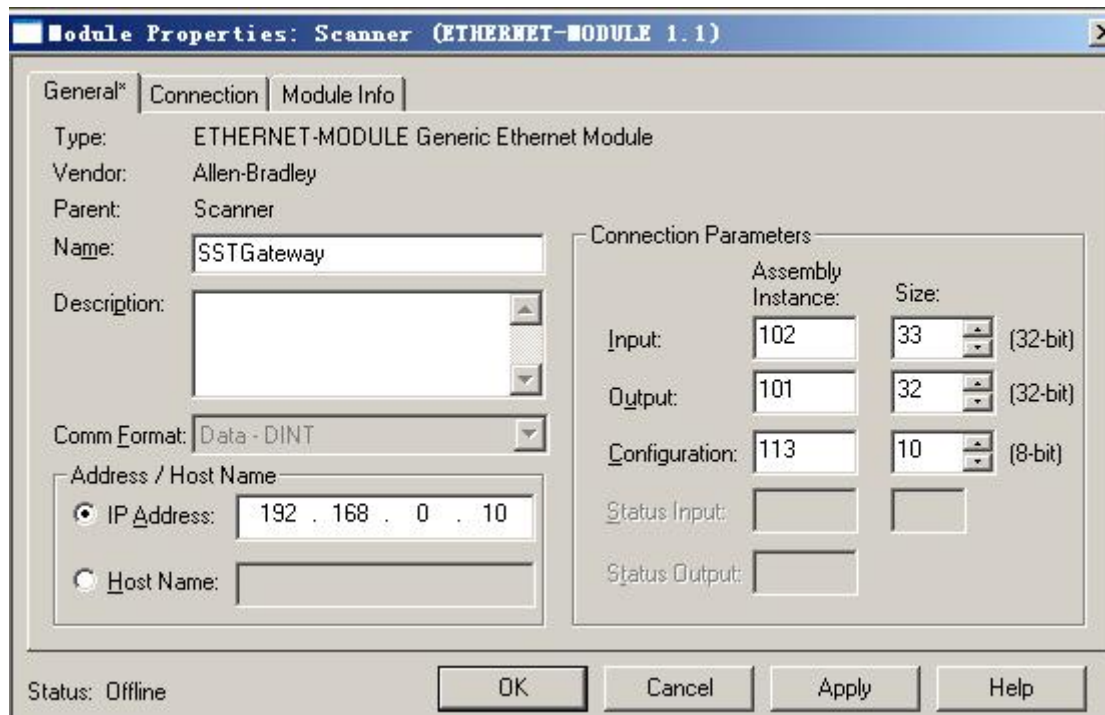

Notes: The "Size" (the bytes number that has been configured) in the above picture, is consistent with the input/output bytes number of Instance which has been configured in the configuration software SST-MI-CFG). In the above picture, "Size" is 32 ($32 \times 32 / 8 = 128$) in the output bytes Instance101. Now, the relevant bytes number should also be 128 in the configuration software.

6.4 How to Read/Write I/O Data

6.4.1 Read and Write Data using I/O mode(Recommended)


The following RSLogix 5000 example will describe how to read/write I/O data using I/O mode.

Right click on EtherNet/IP scanner module, click "New Module", as shown below:

GT100-EI-RS

Modbus/EtherNet/IP Adapter

User Manual

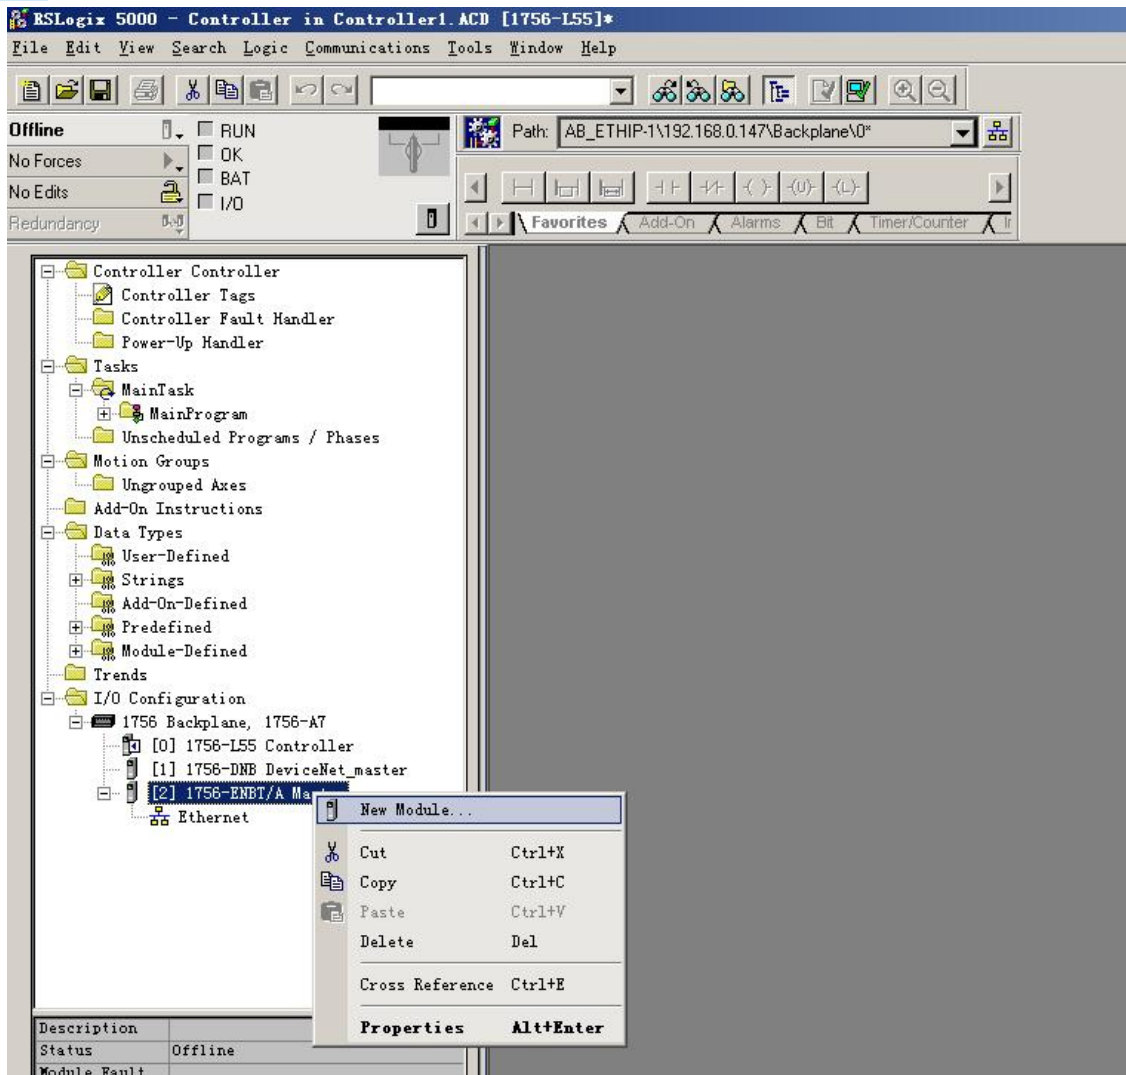


In the pop-up dialog box, unfold "+" before "Communications", choose "ETHERNET-MODULE", click "OK", as shown below:


GT100-EI-RS

Modbus/EtherNet/IP Adapter

User Manual

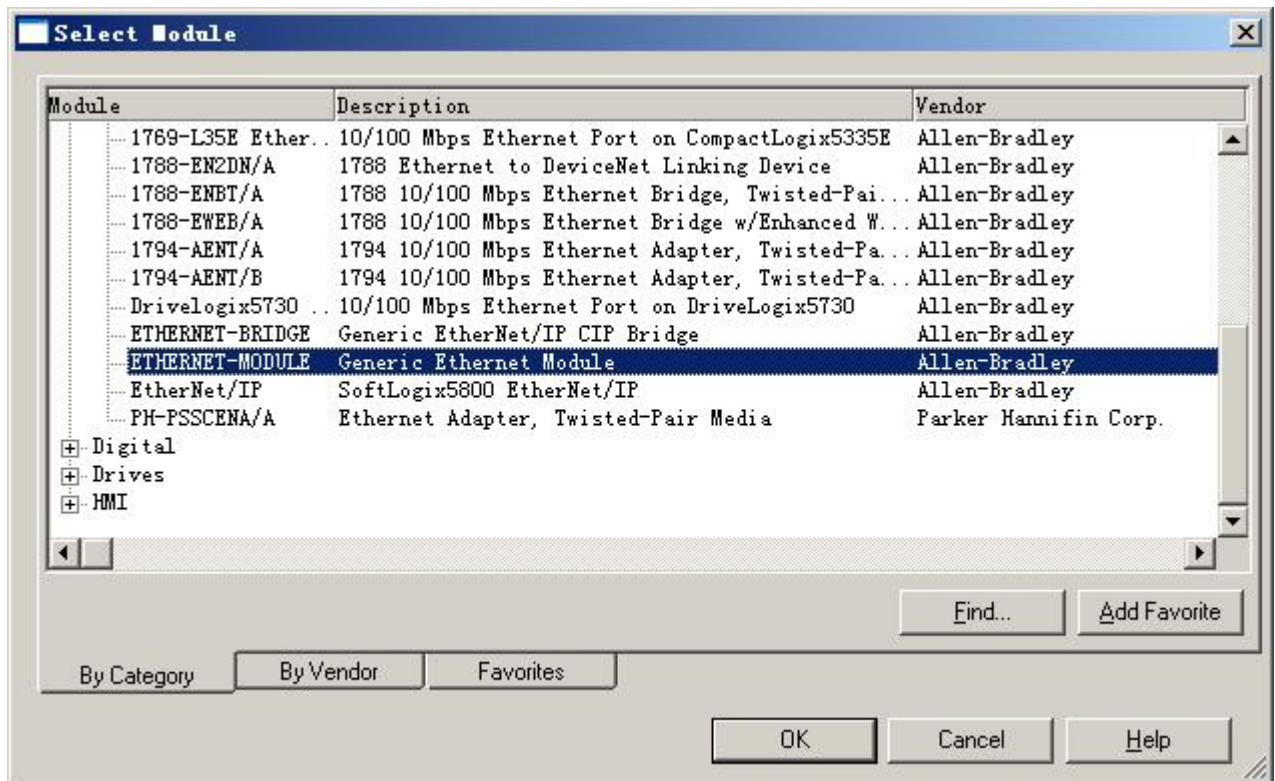

Configure relevant information of GT100-EI-RS in the pop-up window, as shown below:

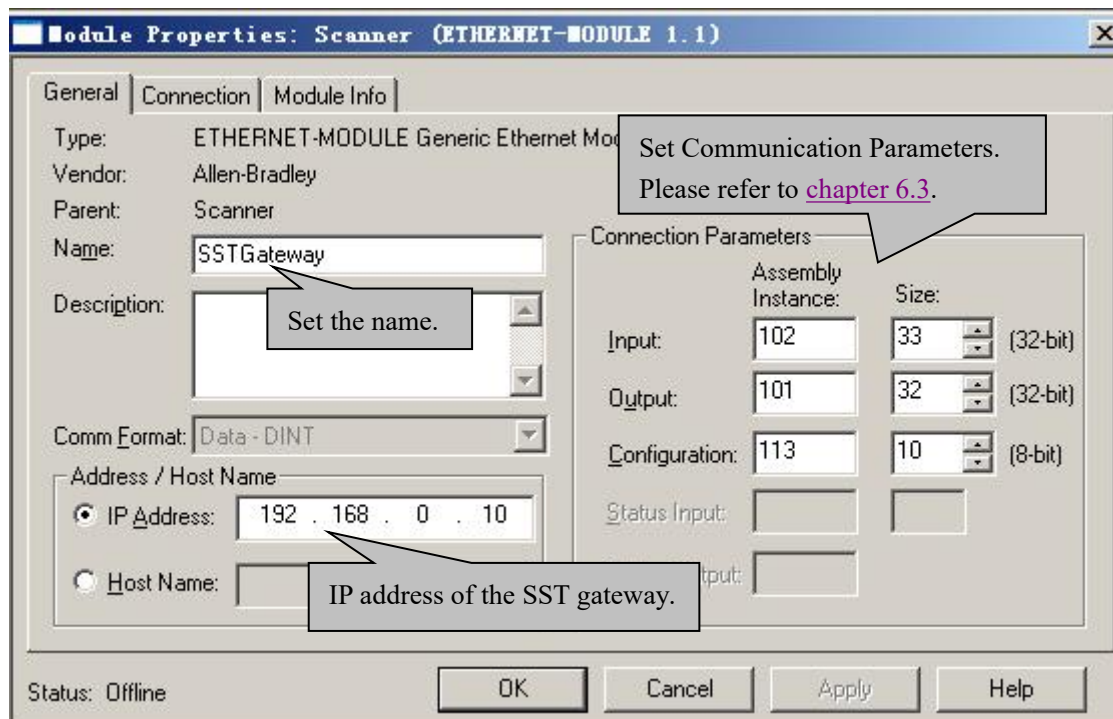

In the above picture, the module information needs to be configured includes:

Name: Name the added EtherNet/IP adapter module (GT100-EI-RS module).

Comm Format: Configure data types. Users can choose data types as DINT, INT, SINT and REAL, etc. After


confirmation, this cannot be changed. If you want to change data types, you can create new module.

IP Address: Set IP address of the EtherNet/IP adapter module (IP address of GT100-EI-RS). IP address of GT100-EI-RS is the address downloaded into module through software SST-MI-CFG.

Connection Parameters: Set Connection parameters during communication, this parameter GT100-EI-RS supports can refer to past chapter.

Note: "Size" (configured bytes) in the above picture should be the consistent with relevant input and output bytes of Instance in the above chapter.

Click "OK", set scanner polling time interval in the pop-up dialog box, the default is 10ms, as shown below:

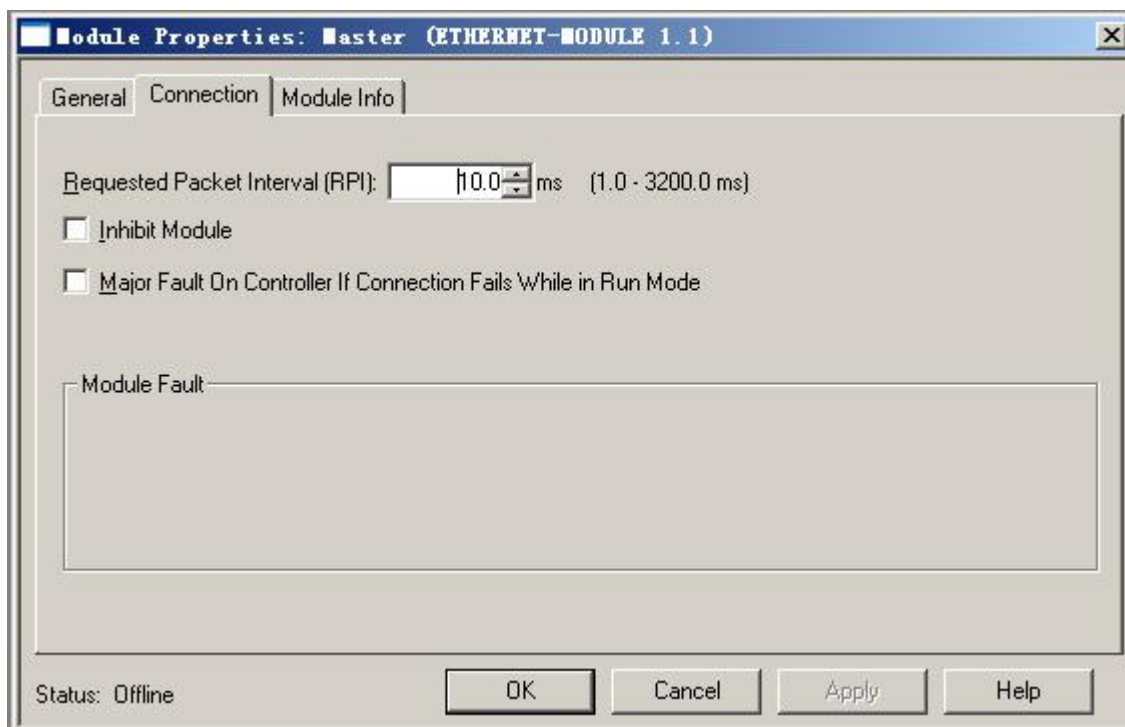


After setting this interval, click "OK" to save. Double click "Controller Tags", unfold "GT100EIRS: O", as shown below:

GT100-EI-RS


Modbus/EtherNet/IP Adapter

User Manual

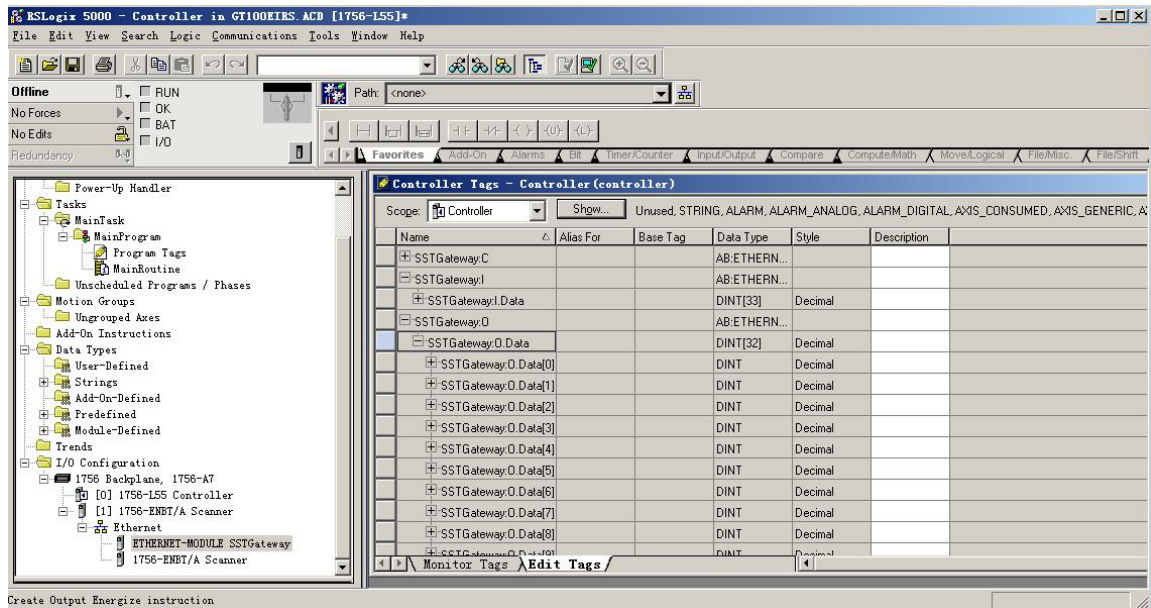

In the above picture, SSTGateway:O.Data [0] ~SSTGateway:O.Data [31] is the corresponding output data address of GT100-EI-RS module in scanner.

Unfold "SSTGateway: I", as shown below:

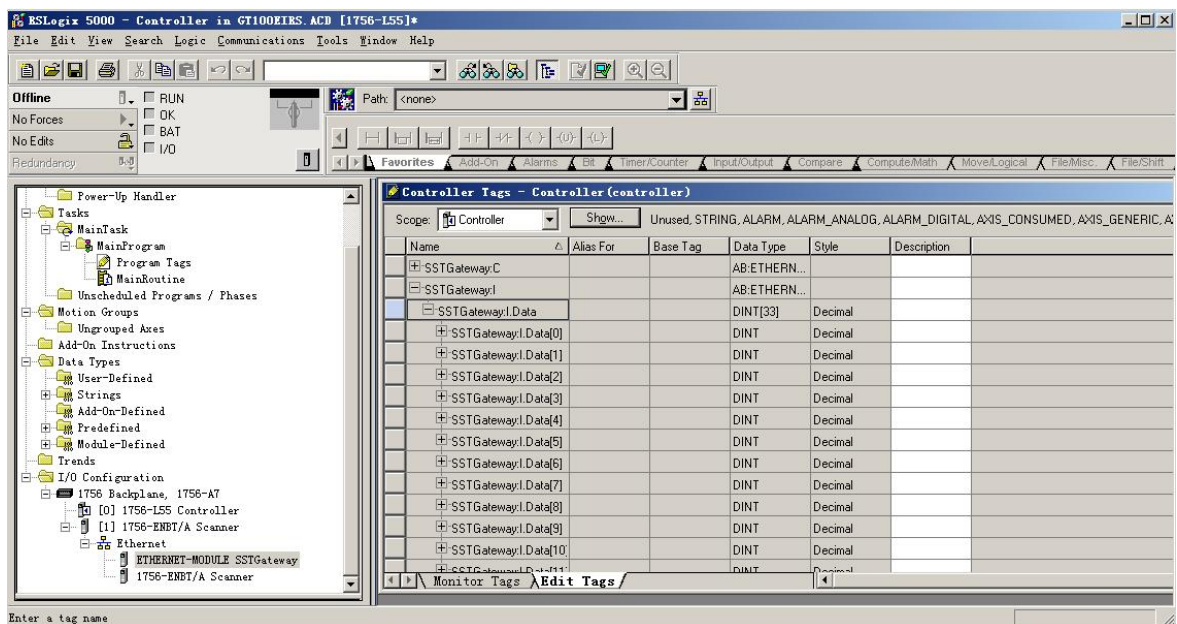


In the above picture, four bytes of SSTGateway: I. Data [0] is real time frame head of EtherNet/IP adapter. SSTGateway:I.Data [1] ~SSTGateway: I. Data [32] is the corresponding input data address of GT100-EI-RS module in scanner.

6.4.2 Read and Write Data using MSG

The following RSLogix 5000 example will describe how to read/write I/O data using MSG.

1 Read I/O Data


Create a new project. it is in the "Offline" mode. Add two new tags "ReadTag" and "ReadData" under the "Controller Tags" and set the type of "ReadTag" as "MESSAGE" and "ReadData" as "DINT [500]".

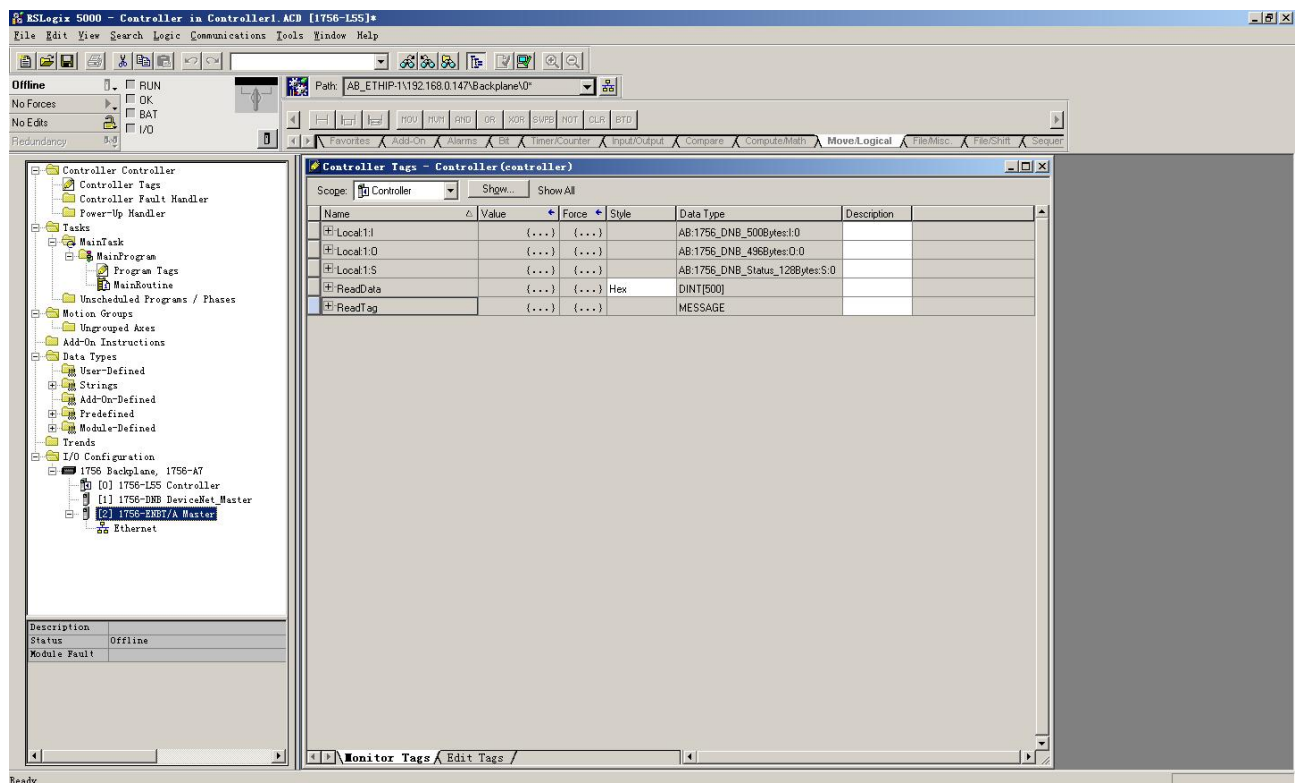

Right click "ReadTag", select "Configure "ReadTag":

GT100-EI-RS Modbus/EtherNet/IP Adapter

User Manual

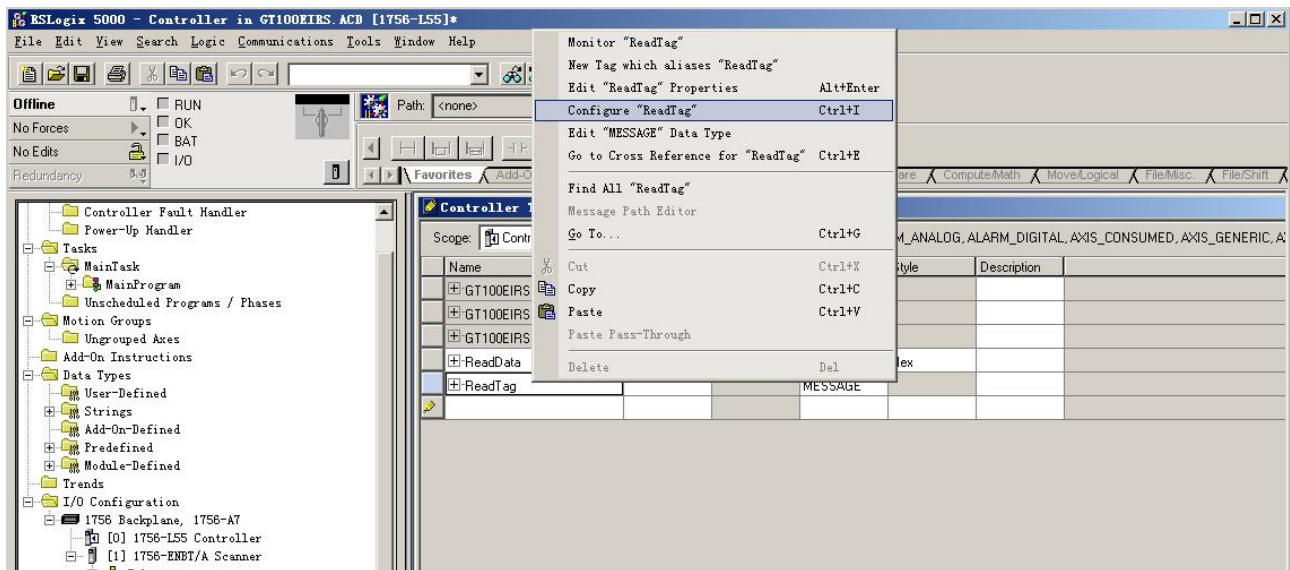

In the new pop-up window, it needs to set some parameters as below:

Message Type: CIP Generic


Service Type: Select "Get Attribute Single", now, relevant service code will become "e (Hex)"

Class: 4 (Hex)

Instance: 102 (128 Bytes), 112 (256 Bytes) and 122 (492 Bytes) can be set

Attribute: 3 (Hex)

Destination: Select "ReadData" label, now, the data that have been received will be saved in this tag.

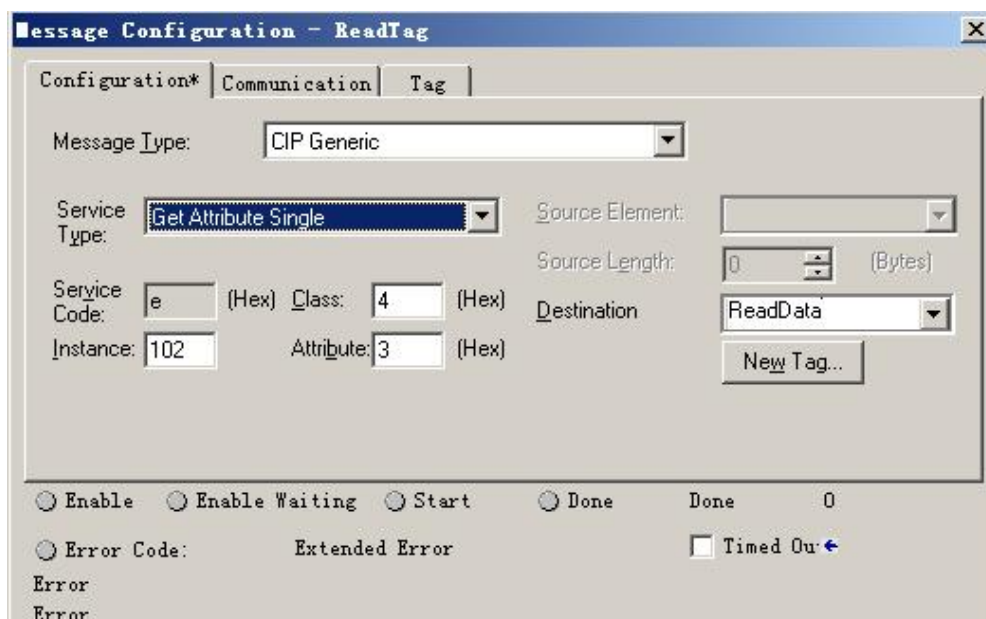


Choose "Communication" label, input the relevant path of connecting EtherNet/IP adapter in the blank space behind the Path, the path format is: EtherNet IP hostname, EtherNet/IP scanner slot No., IP address of EtherNet/IP

GT100-EI-RS Modbus/EtherNet/IP Adapter User Manual


adapter, after setting the path, click "Apply", "Confirm". As is shown below:

In this instance, EtherNet/IP hostname is "Scanner", EtherNet/IP scanner slot No. Is "2", EtherNet/IP adapter (GT100-EI-RS) is "192.168.0.10". IP address of GT100-EI-RS is the address which is downloaded into the module through SST-MI-CFG.

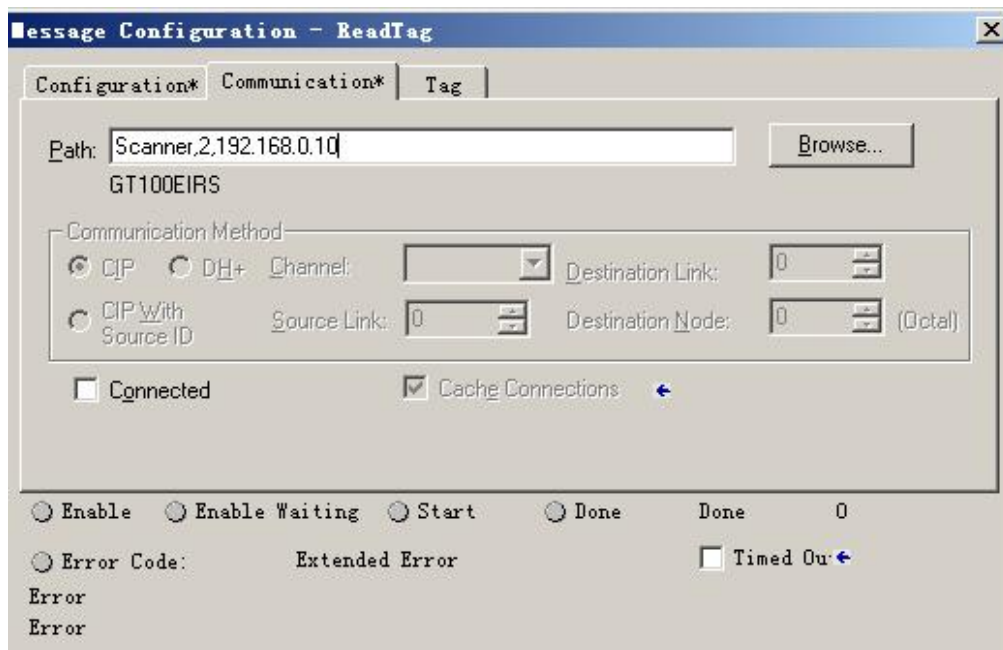

Add a "MSG" command in "MainRoutine" under the "MainProgram" and choose "ReadTag" as "Message Control", as shown below:

GT100-EI-RS Modbus/EtherNet/IP Adapter User Manual

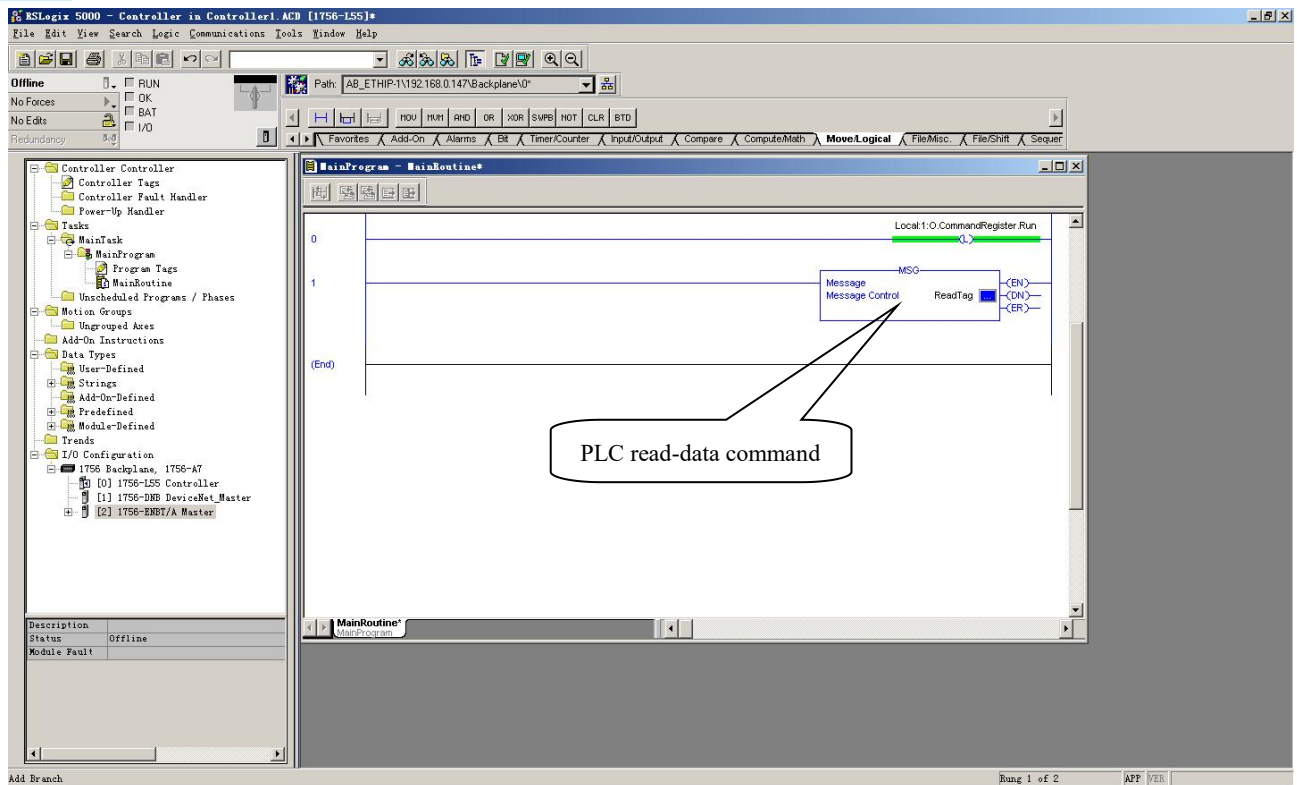

This is a simple command which can send a read request, it still needs to add some logic commands to trigger this command in common program. About the detailed information, please refer to RSLogix5000.


Download the program to the PLC and set PLC into "Online" state.

Click "Control Tags" and select "Monitor Tags", unfold "ReadData", you will see that PLC can read the data of Modbus slave through the adapter GT100-EI-RS.

GT100-EI-RS


Modbus/EtherNet/IP Adapter

User Manual

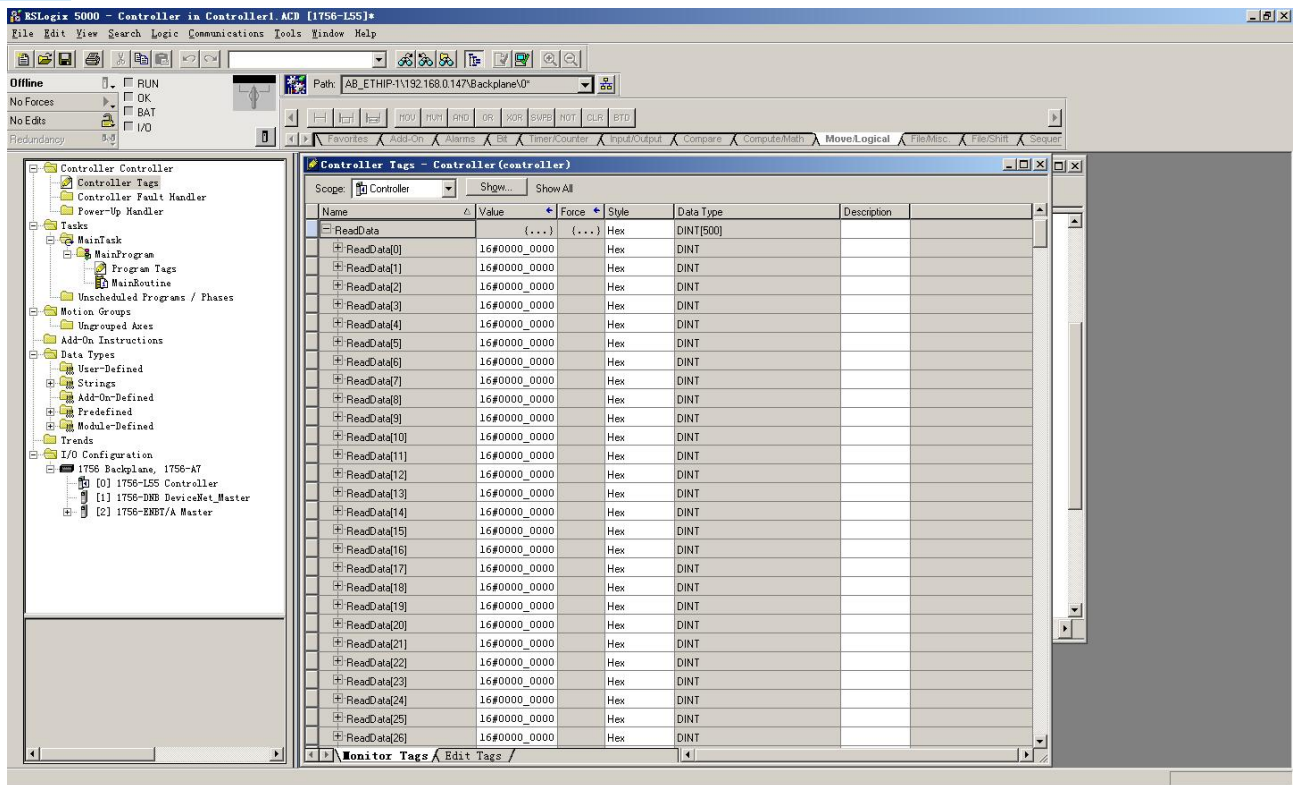


2 Write I/O Data

Enter the "Offline" mode, add two new tags "WriteTag" and "WriteData" under the "Controller Tags". Define the type of "WriteTag" as "MESSAGE" and "WriteData" as "DINT [500]":

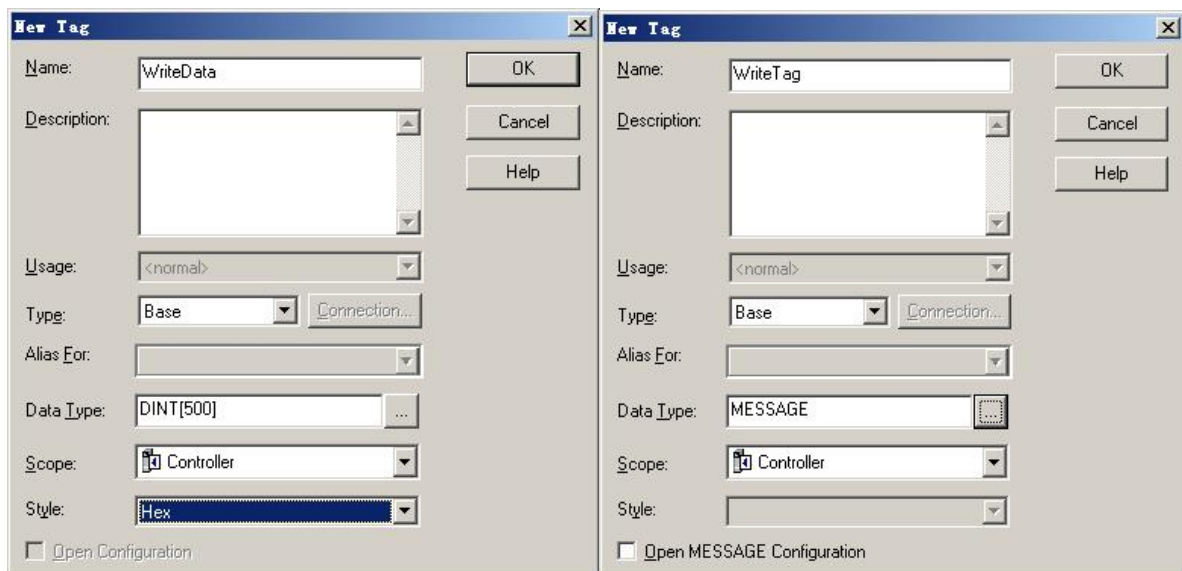


GT100-EI-RS Modbus/EtherNet/IP Adapter User Manual

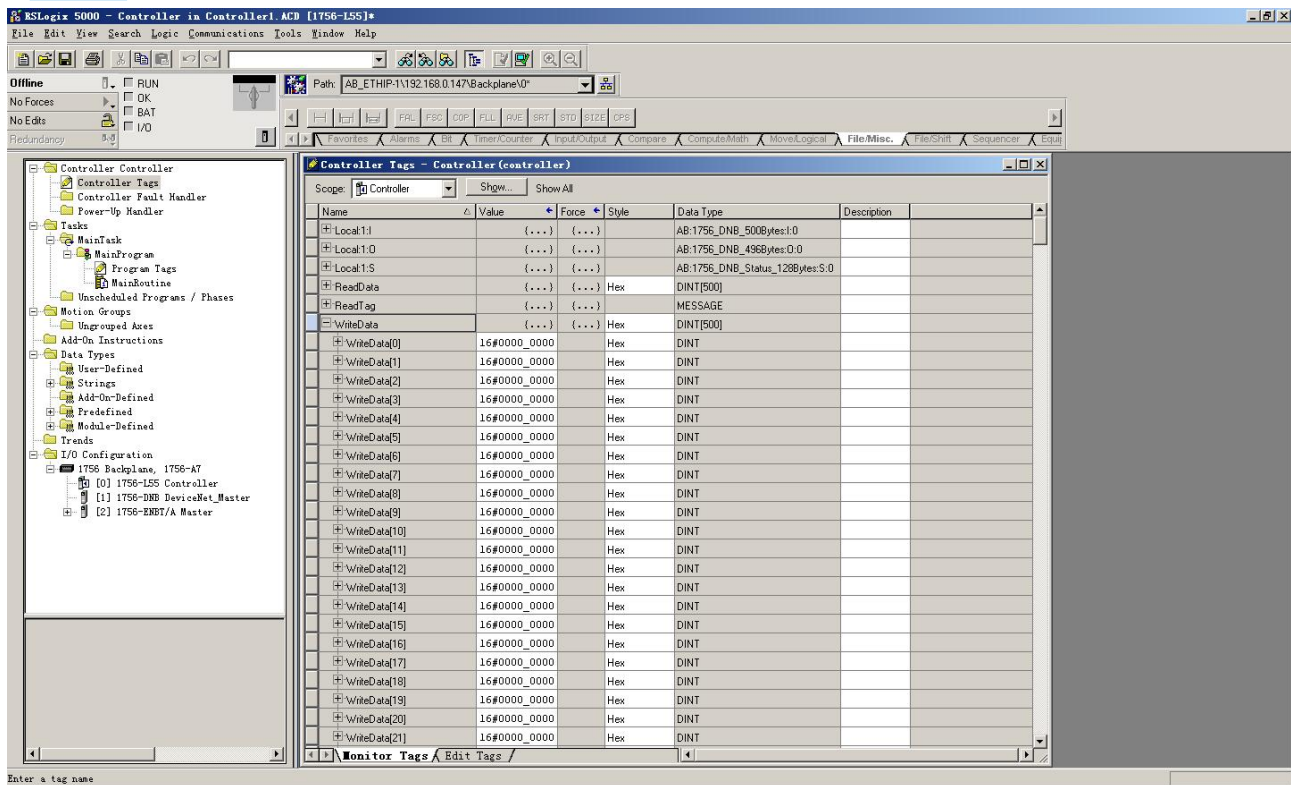

Enter the "Monitor Tags" interface. input some data beginning from address WriteData[0] in the "WriteData" tag. There data will be outputted to GT100-EI-RS through PLC and write these data to Modbus slave devices through Modbus write command.

Right click "WriteTag", select "Configure "WriteTag"":

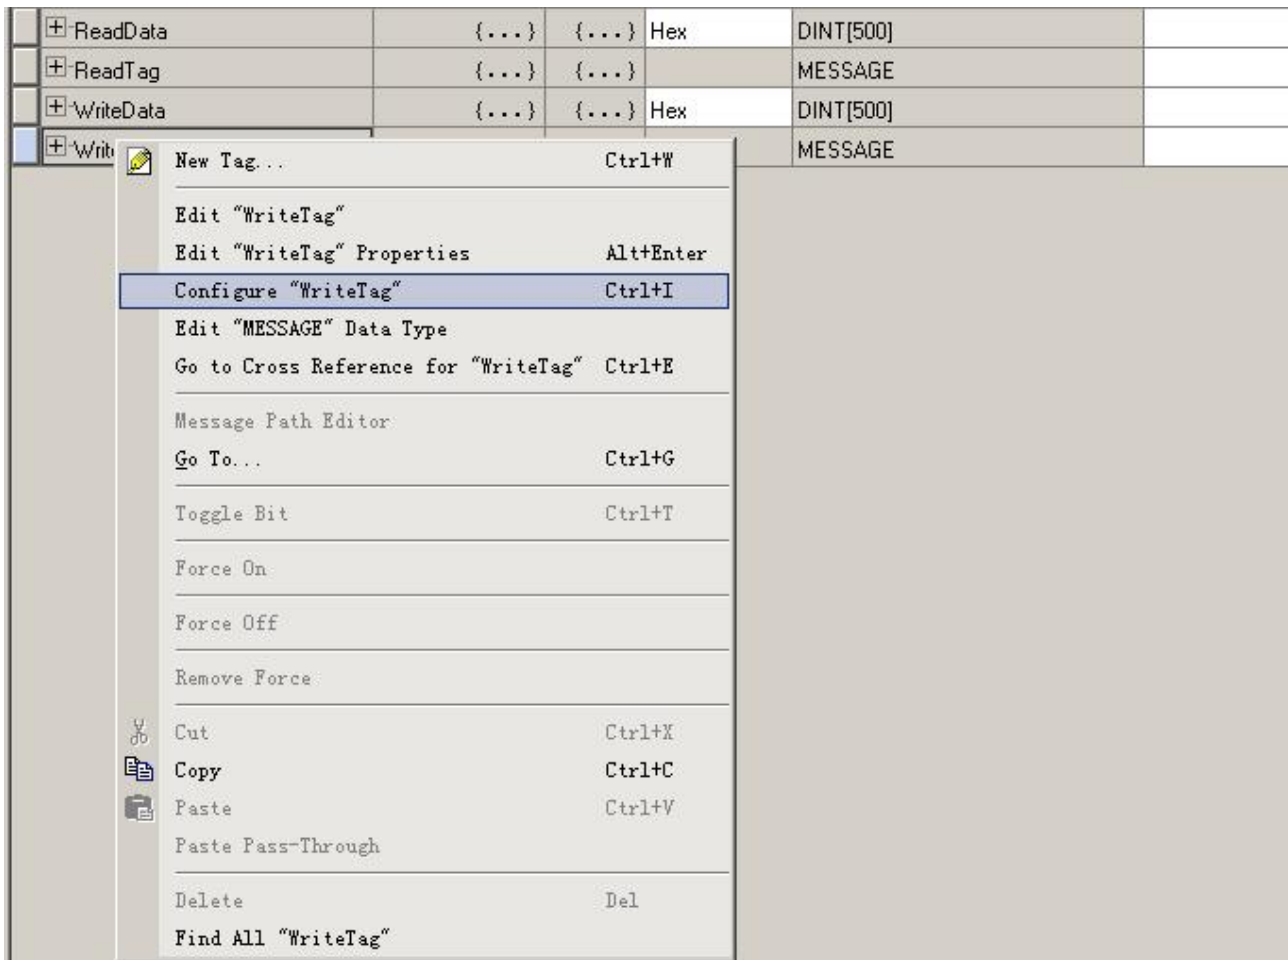

In the new pop-up window, it needs to configure as below:

Message Type: CIP Generic

Service Type: Select "Set Attribute Single", now, relevant Service Code will become "10 (Hex)"

Class: 4 (Hex)

Instance: 101 (128Bytes), 111 (256Bytes) and 121 (492Bytes)

Attribute: 3 (Hex)

Source Element: Select "WriteData" tag, it indicates the data in the "WriteData" tag will become the data PLC outputs.

Source Length: Use byte as unit, this value should be less than or equal to the current selecting bytes which Instance represents (Configured bytes number in SST-MI-CFG).

GT100-EI-RS Modbus/EtherNet/IP Adapter

User Manual

Choose "Communication" label, input the relevant path of connecting EtherNet/IP adapter in the blank space behind the Path, the path format is: EthetNet IP hostname, EtherNet/IP scanner slot No., IP address of EtherNet/IP adapter, after setting the path, click "Apply", "Confirm". As is shown below:


In this instance, EtherNet/IP hostname is "Scanner", EtherNet/IP scanner slot No. Is "2", EtherNet/IP adapter (GT100-EI-RS) is "192.168.0.10". IP address of GT100-EI-RS is the address which is downloaded into the module through SST-MI-CFG.

Add a "MSG" command in "MainRoutine" under the "MainProgram" and choose "WriteTag" as "Message Control", as shown below:

GT100-EI-RS

Modbus/EtherNet/IP Adapter

User Manual

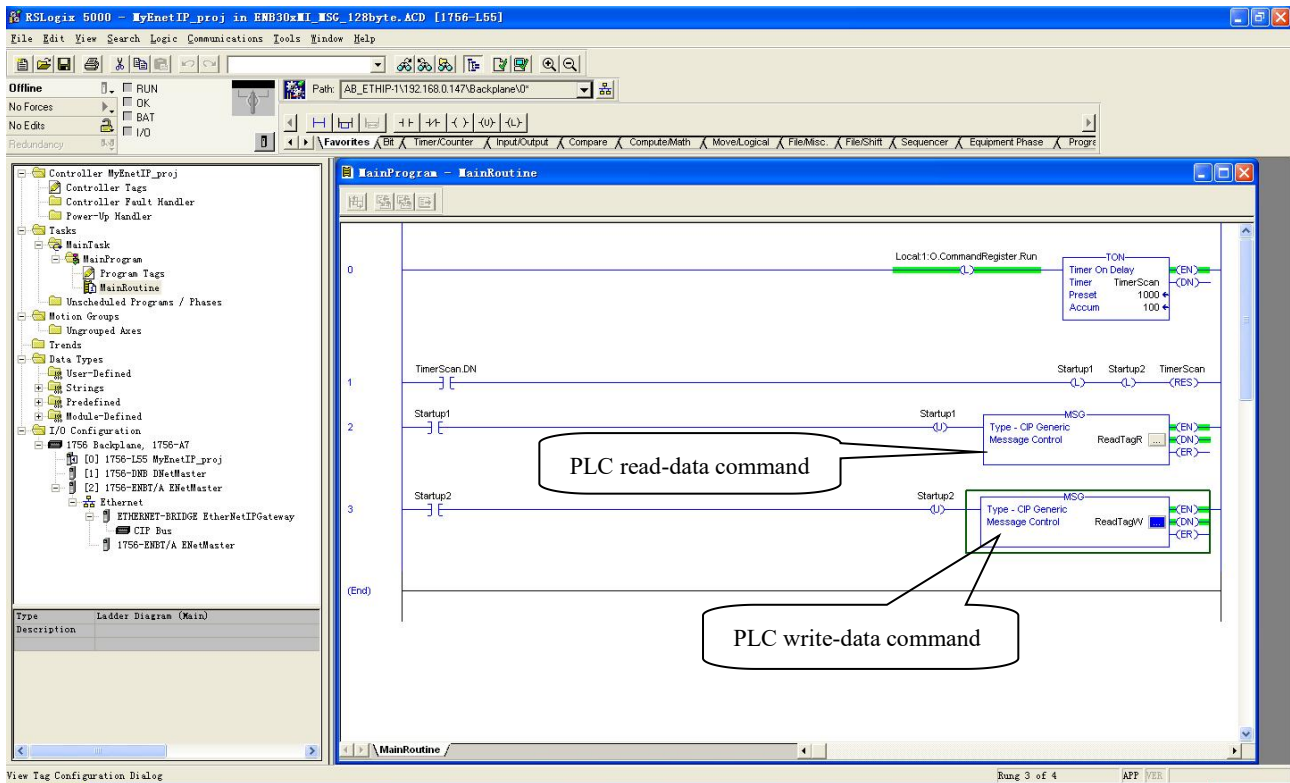

Download PLC program to the PLC and set PLC to "Online" state, the data in "WriteData" will be outputted to Modbus slave through GT100-EI-RS (EtherNet/IP adapter).