



SCL Manager Authorization

Authorization is required before using SCL Manager. SCL Manager provides modeling file for Modbus/IEC61850 protocol mapping.

Step 1: Install SCL manager. Open SCL manager and click "Request or Install Licence" to next step.

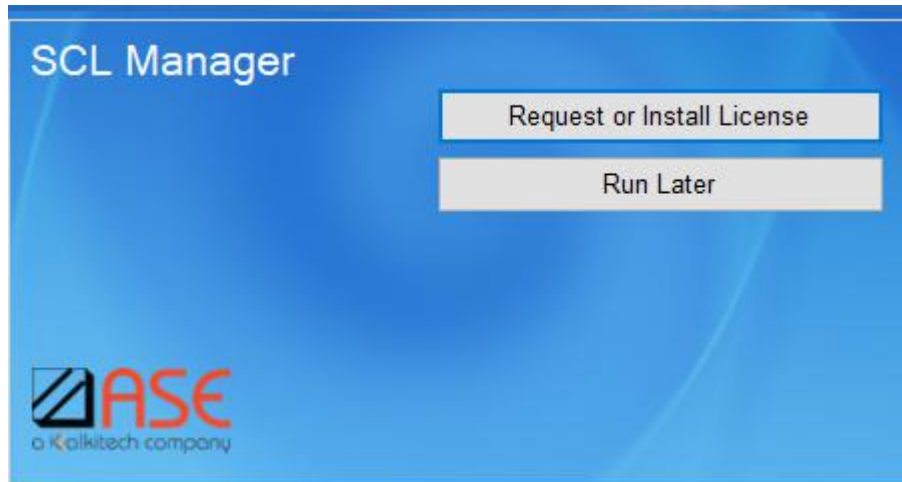


Step 2: Request license

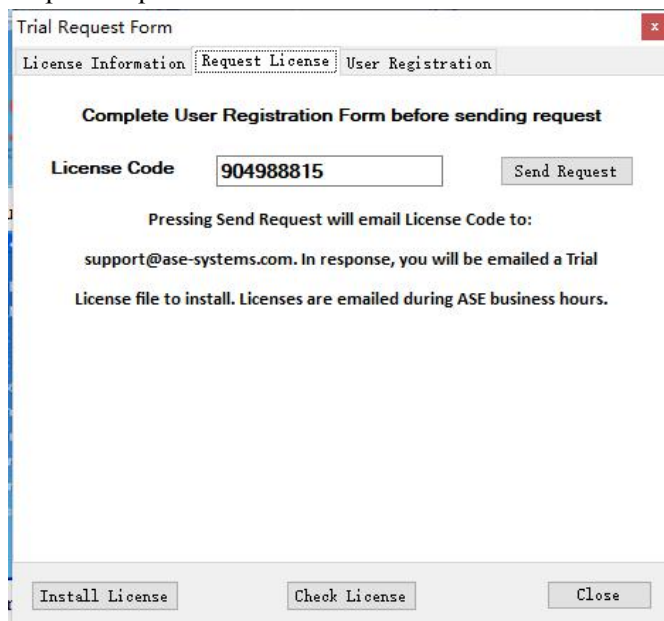

Click "Request license". Send the License Code and your relevant information to Email: support@sstcomm.com.

Step 3: Click "Install License"

SCL Manager Authorization

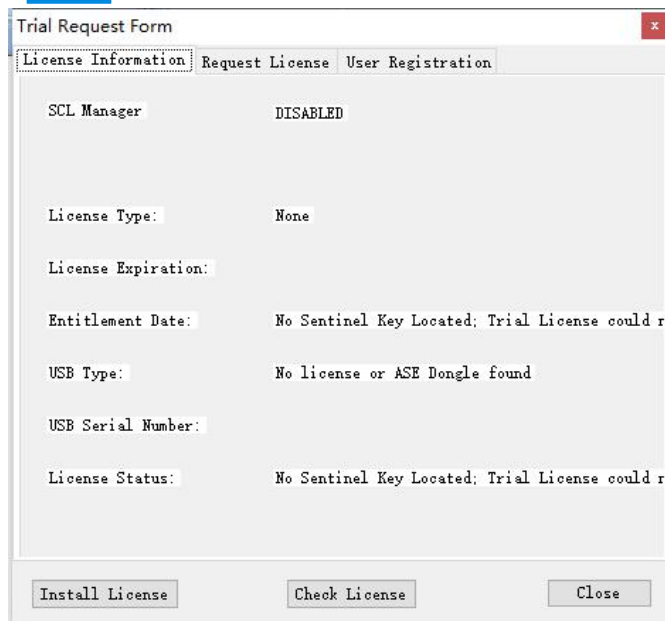


The screenshot shows the 'Trial Request Form' window with the 'License Information' tab selected. The window displays the following information:

Field	Value
SCL Manager	DISABLED
License Type:	None
License Expiration:	
Entitlement Date:	No Sentinel Key Located; Trial License could not be installed.
USB Type:	No license or ASE Dongle found
USB Serial Number:	
License Status:	No Sentinel Key Located; Trial License could not be installed.

At the bottom of the window, there are three buttons: 'Install License', 'Check License', and 'Close'.


SSTCOMM will reply the Email with an attachment (*.dat file). Install the *.dat file and you will see a successful installation window.

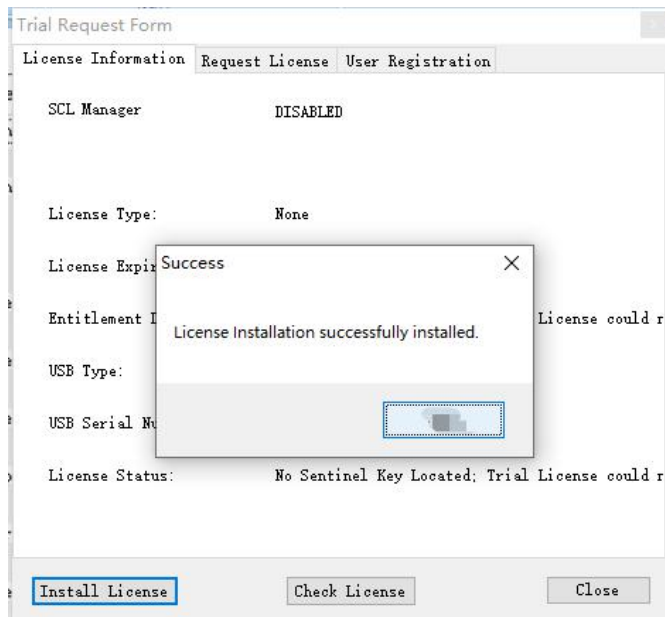


The screenshot shows the 'Trial Request Form' window with the 'License Information' tab selected. A 'Success' dialog box is overlaid on the window, displaying the message: 'License Installation successfully installed.' The dialog box has an 'OK' button at the bottom right. The background window shows the same license information as the previous screenshot, with the 'Install License' button highlighted.

Click "OK ", and then a license warning window will appear to tell you how long you can use your license.

SCL Manager Authorization

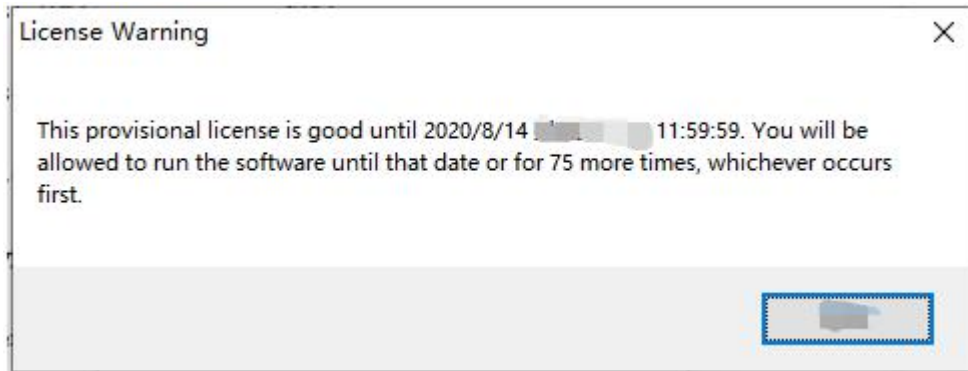

Click "OK ", then you can enter the SCL manager software, there is a Checking updates for SCL manager window, click " Cancel".

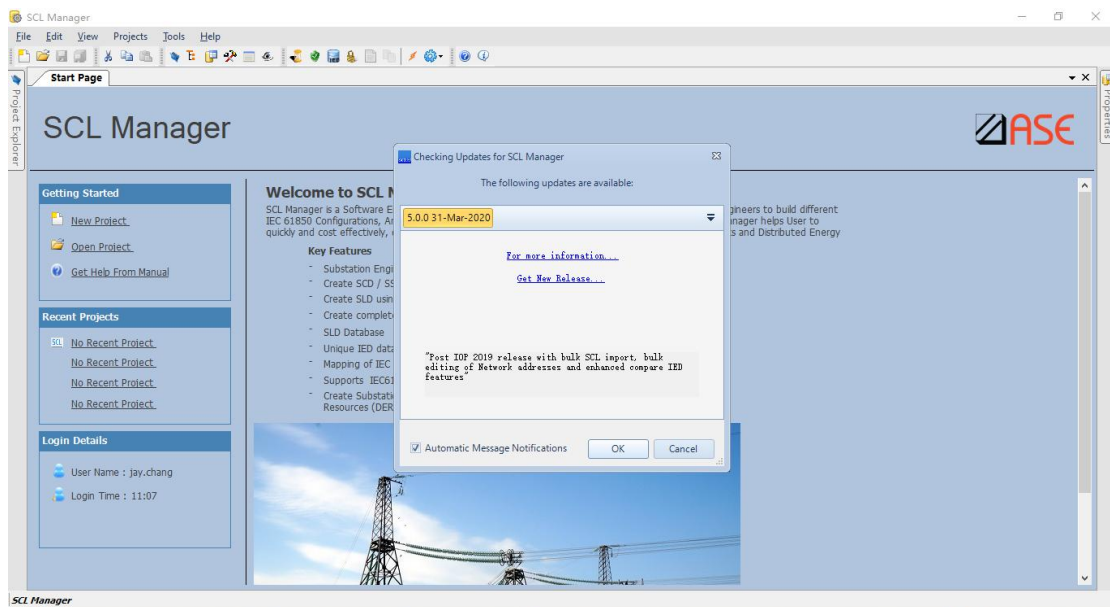

Step 4: The authorization is complete and the SCL manager software can be used.