

How to use the Ping function


The process of Ping Ethernet device through PC:

1、 Click start->Run:




Picture 1

2、 Input “CMD” in the interface below

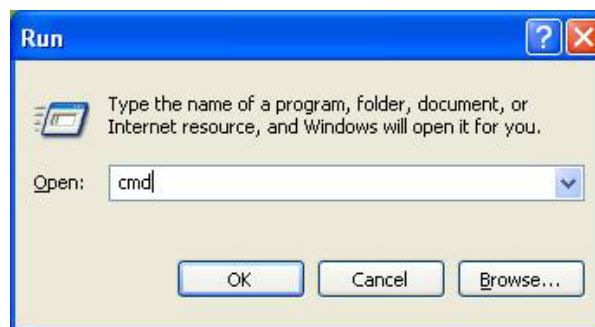


Picture 2

3、 Input: ping+SPACE+IP address, press enter. “IP address” means the device IP address you want to pin, shown as below:

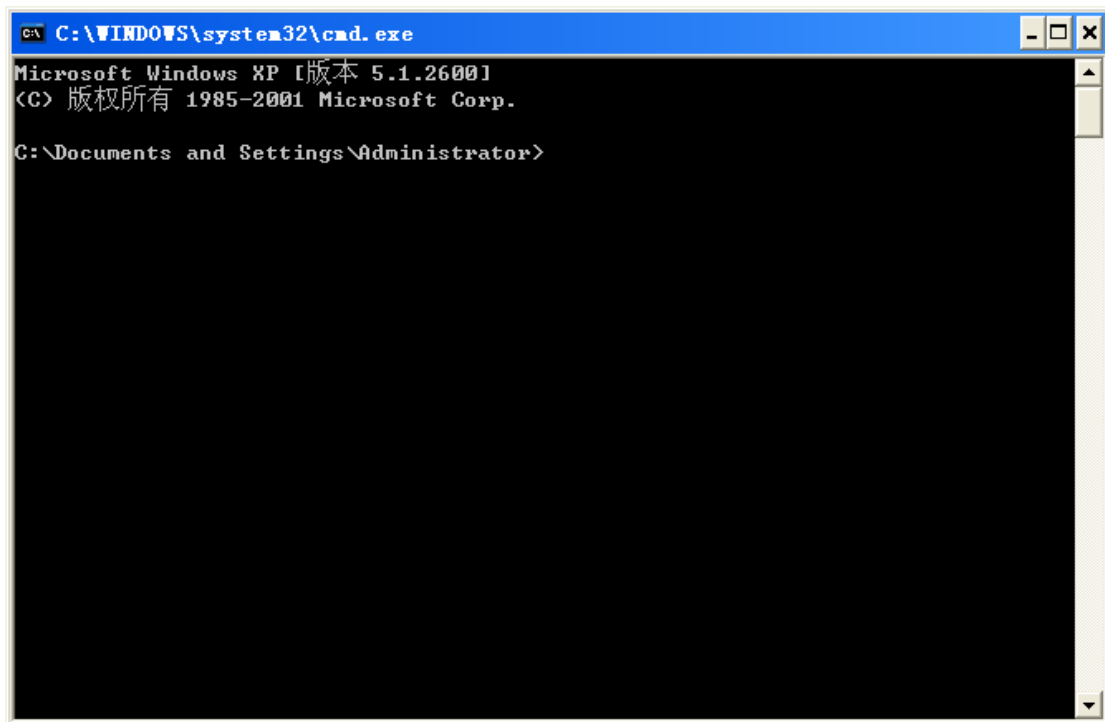

Picture 3

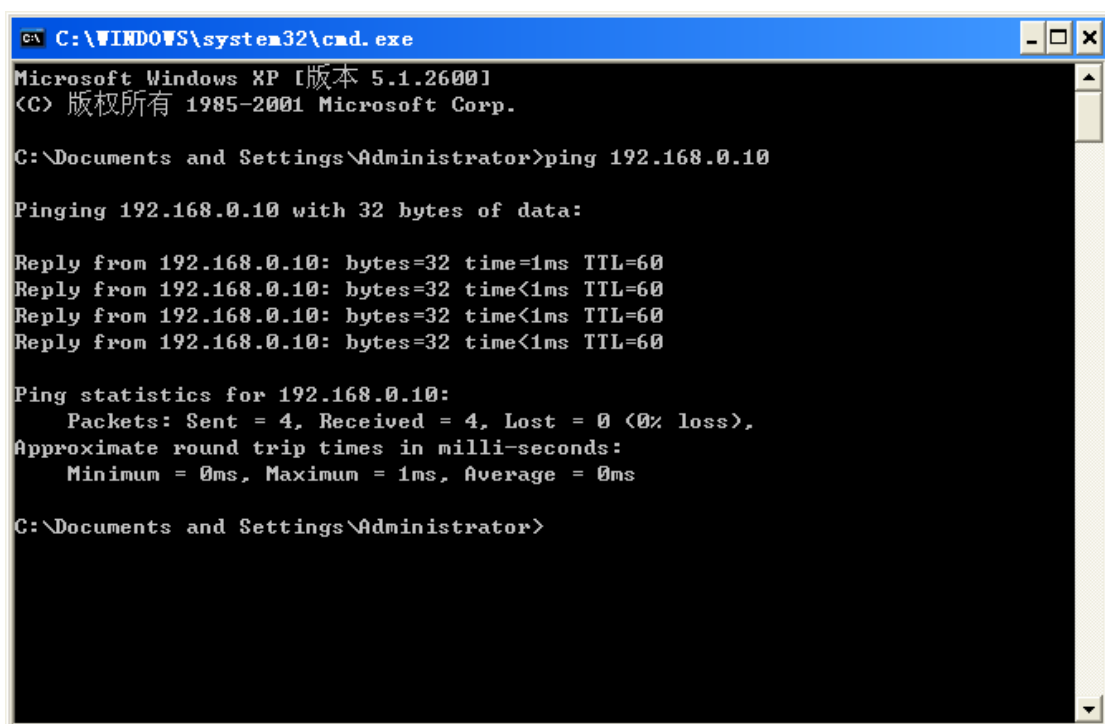

Picture 4

- 4、 If the result of ping like picture 4, it means the network connection between PC and the Ethernet device is ok.